



Assemble the lower fuselage (27)

Issue 53


In this issue, we will attach the motor to the lower fuselage. Pay attention to the orientation of the parts when attaching.



53-1 Motor



53-2 Motor Parts

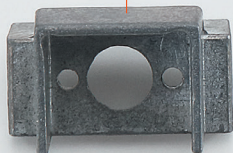

53-3 Motor Tube



53-4 Motor Shaft



AP Screw (M2.0x4mm) ×3 (1 spare)



GM Screw (M1.6x3mm) ×3 (1 spare)



※Some parts may differ from the product version, but it will not affect the assembly.

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.



Screwdriver
Included in Issue 1.

Check!

Be sure to check the assembly video for detailed demonstrations.



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.





Cautions and Prohibitions.




Key points for using tools and techniques.


1 Attach the motor

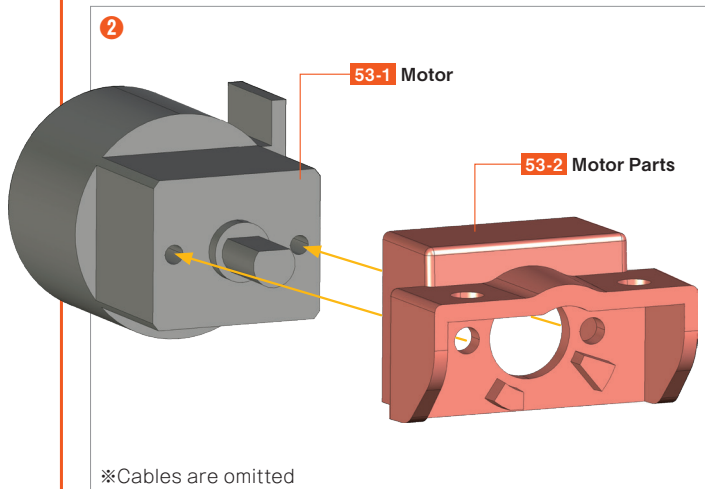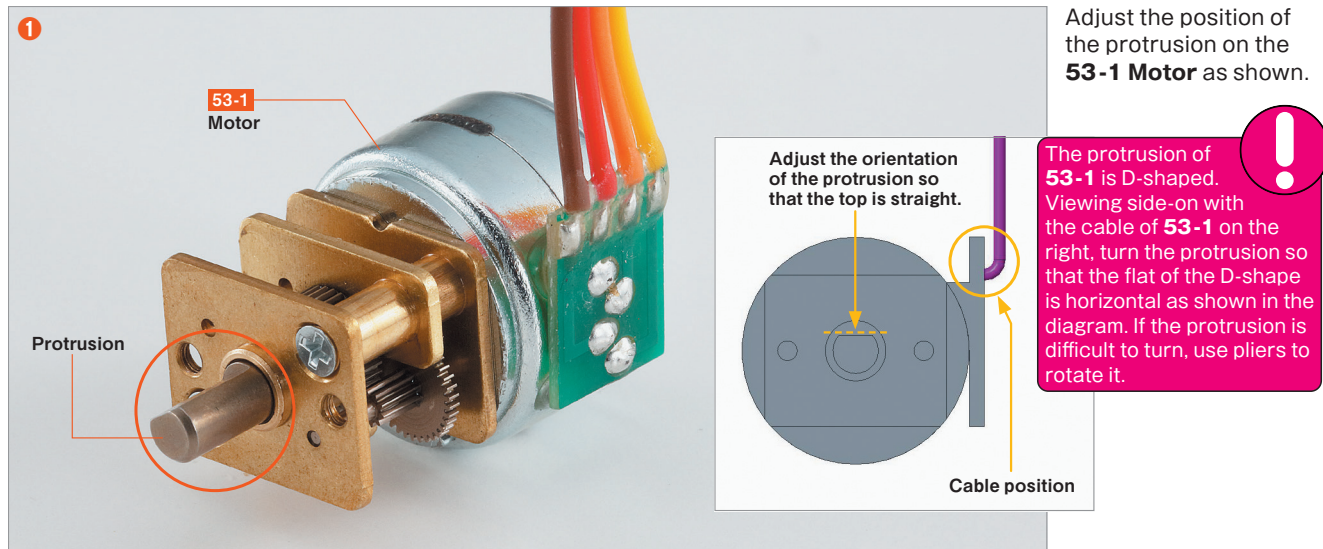


Insert the **53-2 Motor Parts** into the **53-1 Motor** adjusted in step **1** as shown.

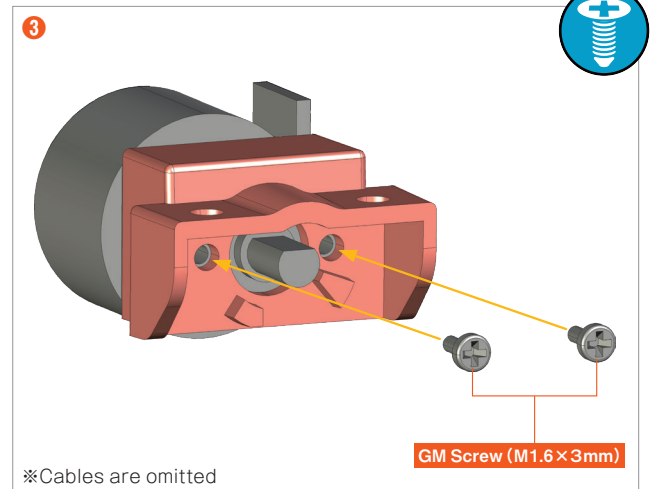


Secure the motor set in step **2** with two **GM screws (M1.6 x3m)** as shown.

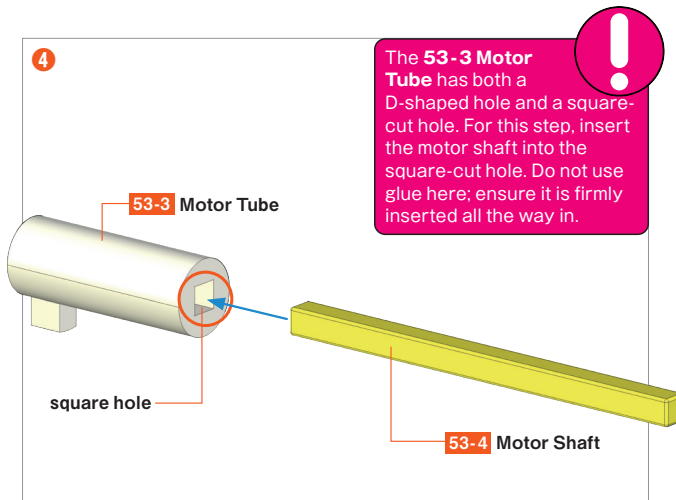


Insert the **53-4 Motor Shaft** into the square hole of the **53-3 Motor Tube**.

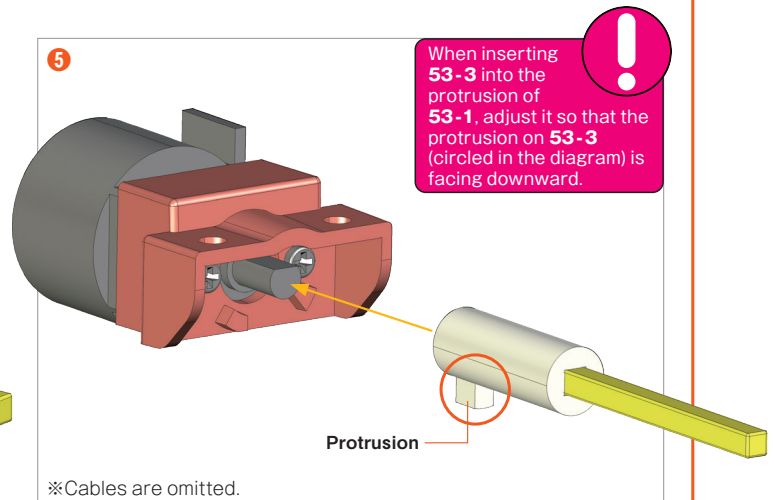

Fit the D-shaped hole of the **53-3 Motor Tube** assembled in step **4** onto the protrusion of the **53-1 Motor** assembled in step **3**.

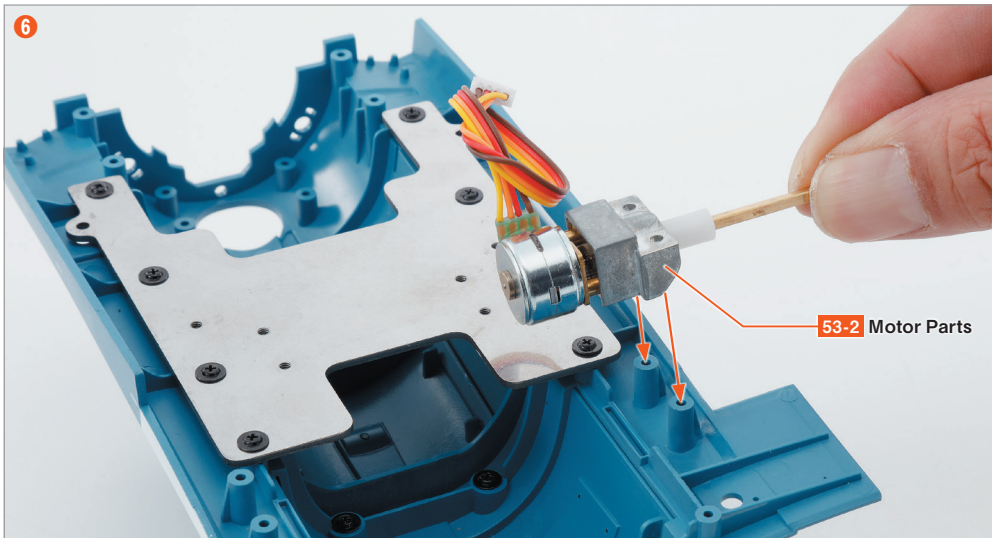


Insert the motor assembled in step 6 into the lower fuselage assembled in issue 52 as shown.

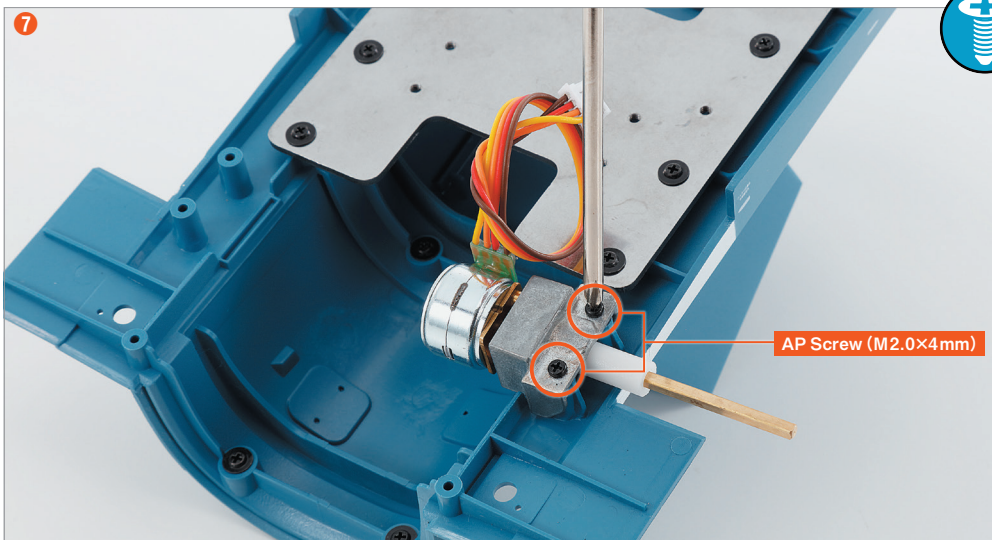

Secure the motor assembled in step 6 with two **AP screws (M2.0x4mm)** as shown.

Complete!

The assembly for this issue is now complete.

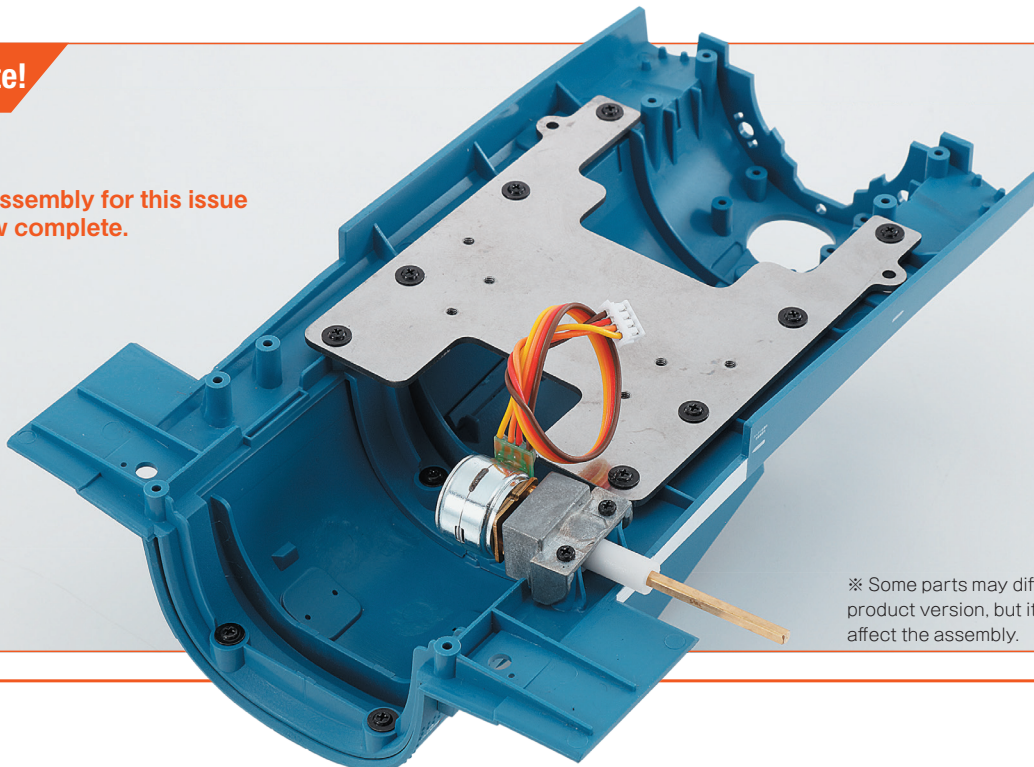

※ Some parts may differ from the product version, but it will not affect the assembly.