

Assemble the Engine Nozzle ②

In this issue, we will continue assembling the engine nozzle. Be careful not to damage the thin parts.

58-2 Engine Parts 2

58-1 Engine Parts 1

58-4 Engine Parts 4

58-3 Engine Parts 3

58-5 Engine Parts 5

58-6 Iris Panel×12

BP Screw (M1.4×4mm) × 5 (1 spare)

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

☐ Screwdriver

Included in Issue 1.

☐ ABS Cement

For joining ABS plastic parts.

Check!

Be sure to check the assembly video for detailed demonstrations.



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.



Key points for using tools and techniques.

1 Assemble the Engine Nozzle

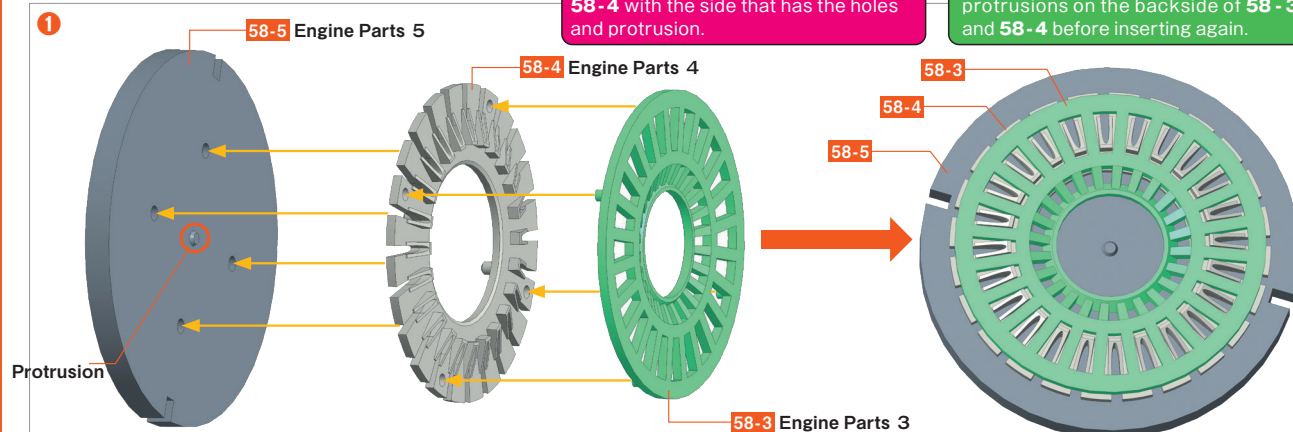


Stack **58-3 Engine Parts 3**, **58-4 Engine Parts 4**, and **58-5 Engine Parts 5** as shown.



2

BP Screw (M1.4×4mm)

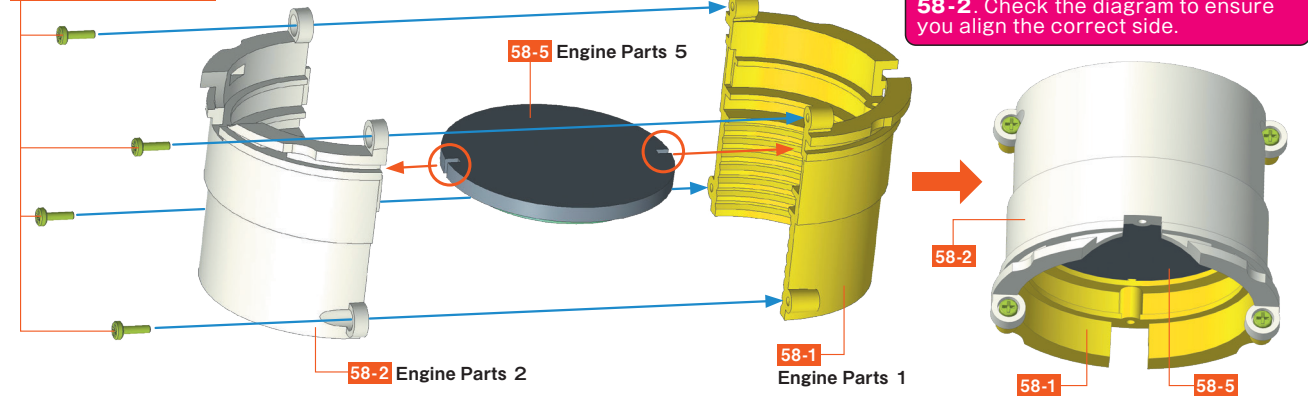


Sandwich the parts assembled in step 1 between **58-1 Engine Parts 1** and **58-2 Engine Parts 2** as shown, and secure them in four places from the **58-2** side with **BP screws (M1.4×4mm)**.

If loose when inserting, apply a small amount of **ABS Cement** to the protrusions on the backside of **58-3** and **58-4** before inserting again.

3

58-6 Iris Panel×12

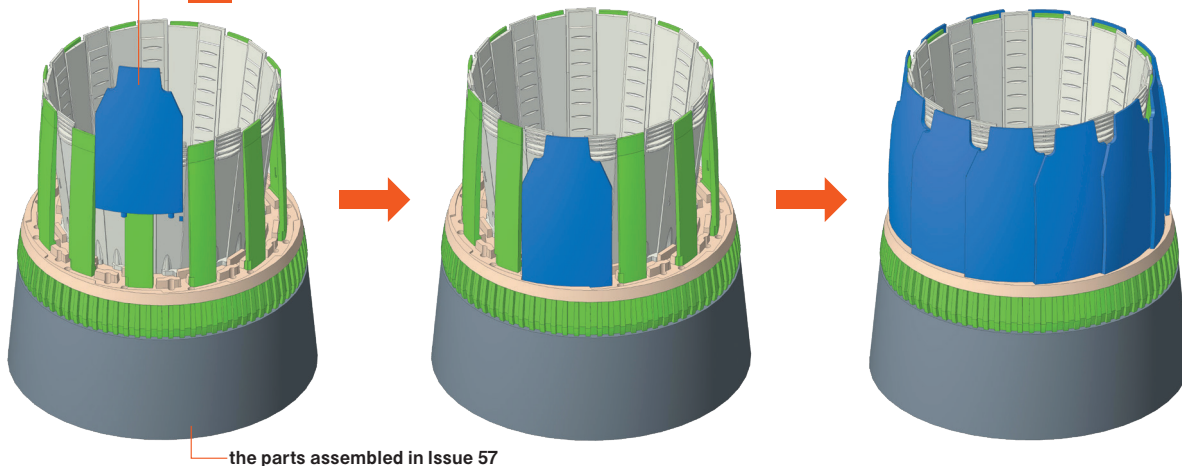

Insert **58-6 Iris Panels** into the engine nozzle assembled in issue 57 as shown. Insert all 12 pieces of **58-6**.

Complete!

The assembly for this issue is now complete.

