


Issue 61

Assemble the Engine Nozzle ⑤



In this issue, we will continue assembling the internal mechanism of the engine nozzle.

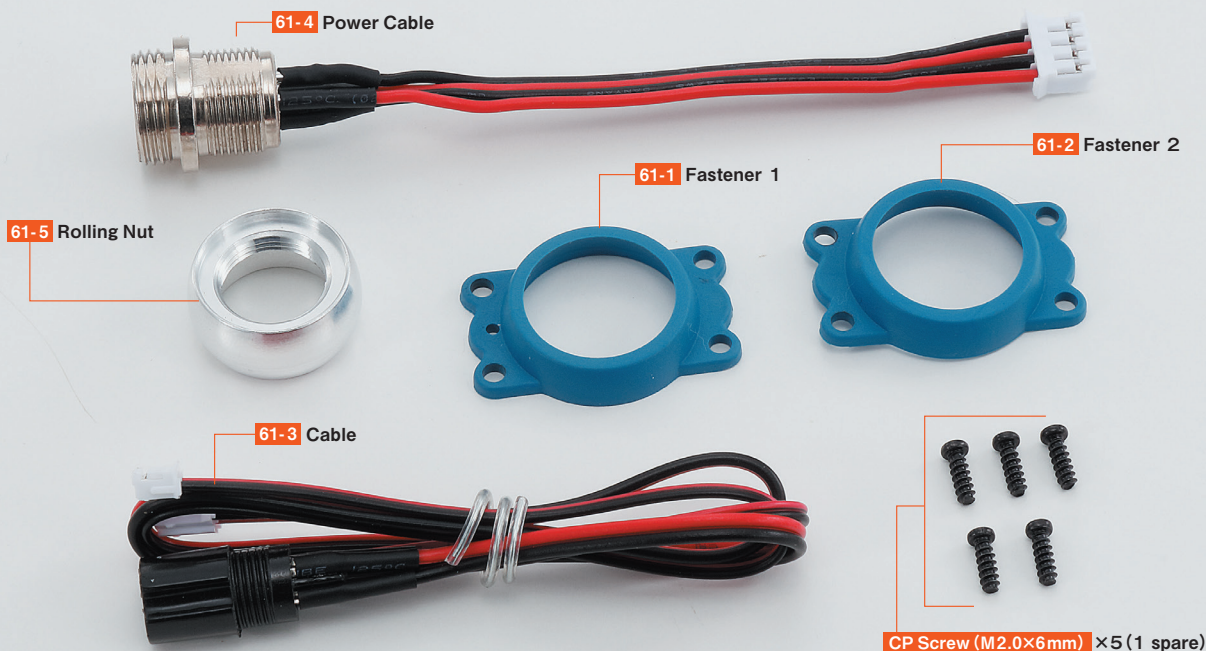

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.



Screwdriver
For securing screws.

Check!

Be sure to check the assembly video for detailed demonstrations.



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.




Key points for using tools and techniques.




1 Assemble the Engine Nozzle

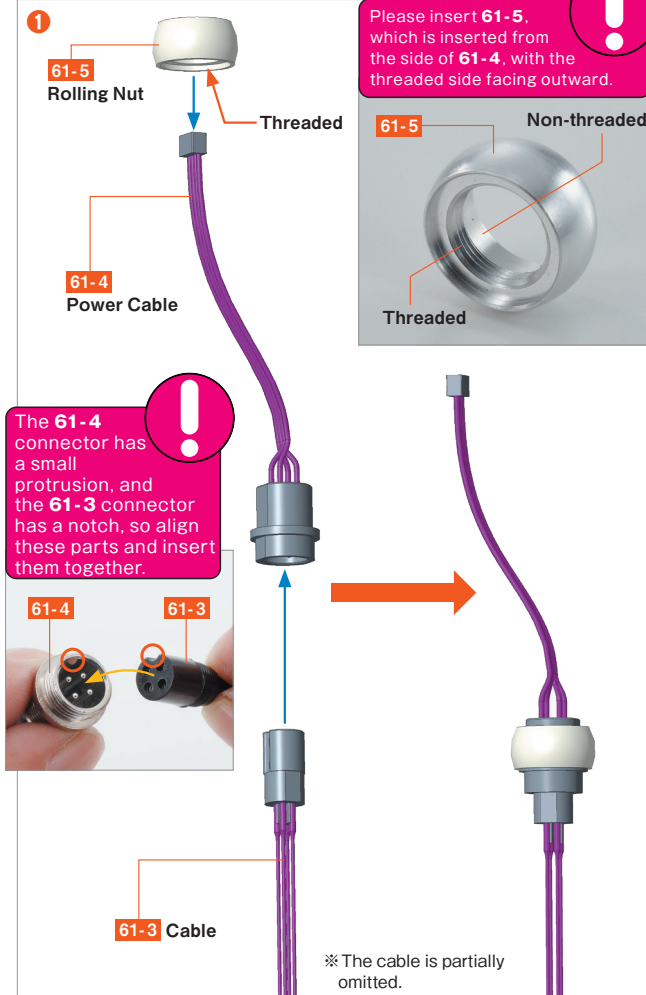

Combine the **61-3** Cable with the **61-4** Power Cable as shown. Then, insert the **61-5** Rolling Nut from the side of the **61-4** Power Cable and tighten it by turning clockwise.

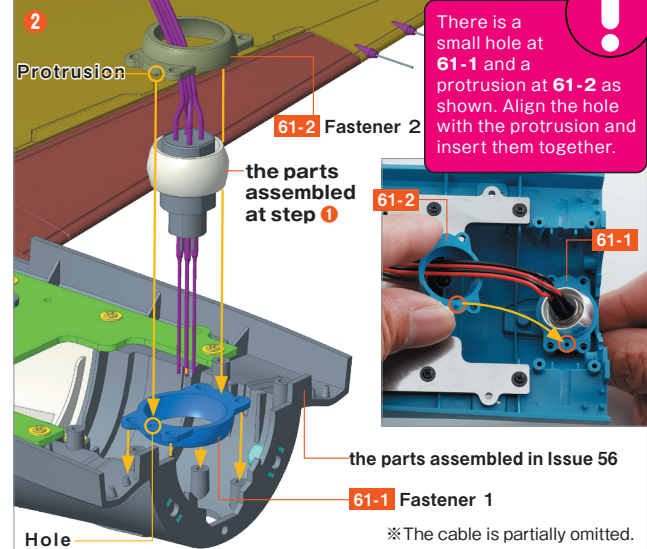

Insert **61-1** Fastener 1 into the rear section of the fuselage assembled in Issue 56. Then, thread the cable assembled in Step 1 through from the side of **61-3**, and insert **61-2** Fastener 2 from above.

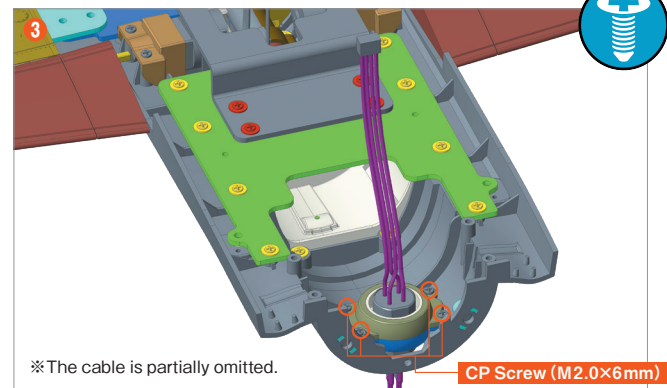

Secure the four locations with CP screws (M2.0x6mm).

Complete!

The assembly for this issue is now complete. A part of the engine's internal mechanism has been installed on the rear section of the fuselage.

