


Assemble the area around the tail fin ②

Issue 91

In this issue we will install the motor that moves the tail fin's movable section.

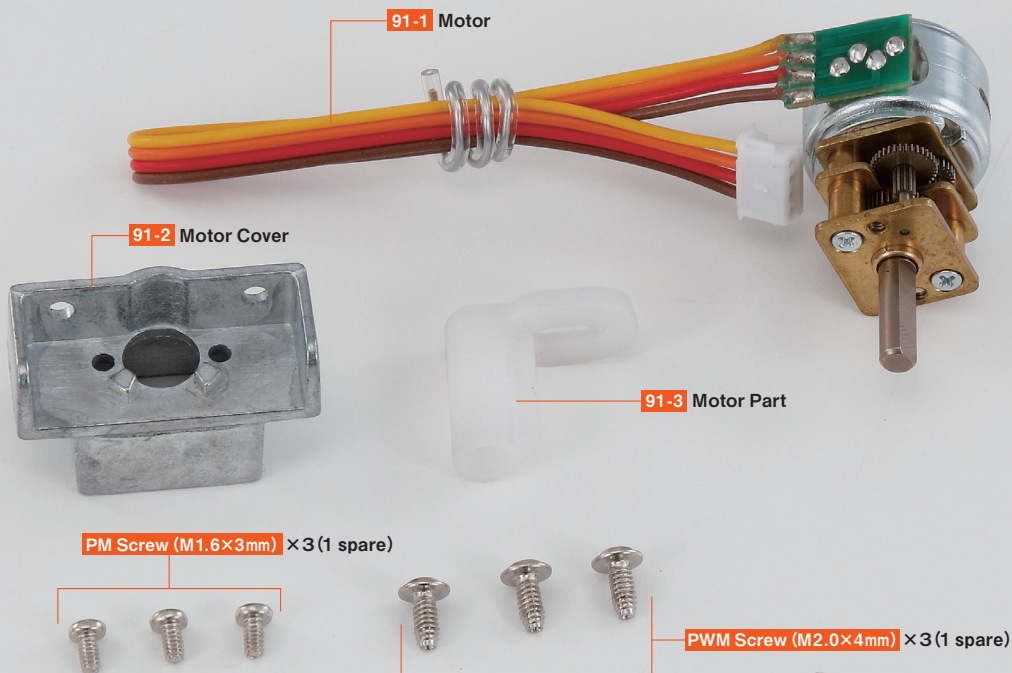

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.



Screwdriver
For tightening screws.

Check!

Be sure to check the assembly video for detailed demonstrations.



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.




Key points for using tools and techniques.



1 Attach the Motor

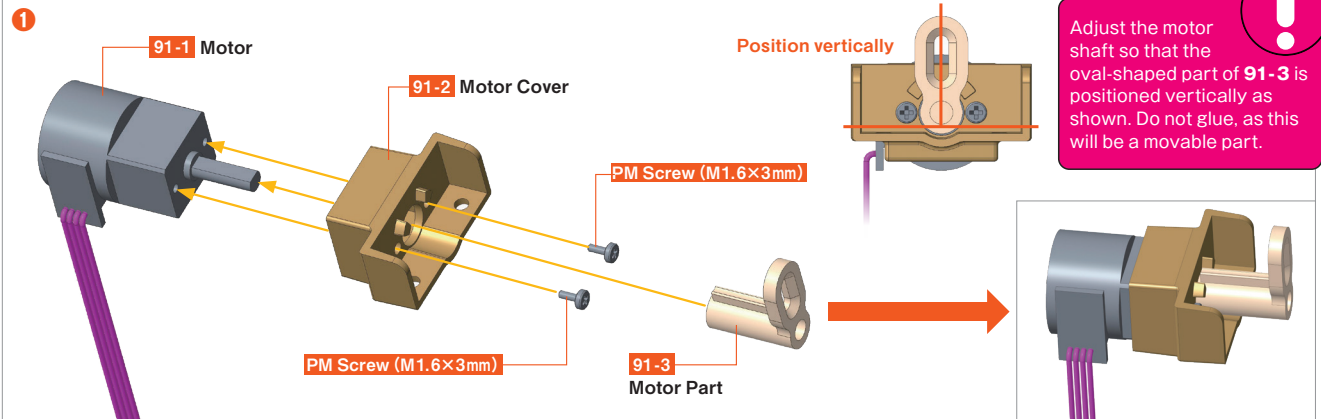

Insert the **91-2 Motor Cover** and **91-3 Motor Part** into the **91-1 Motor** as shown, and secure them in two places with **PM screws (M1.6×3mm)**.

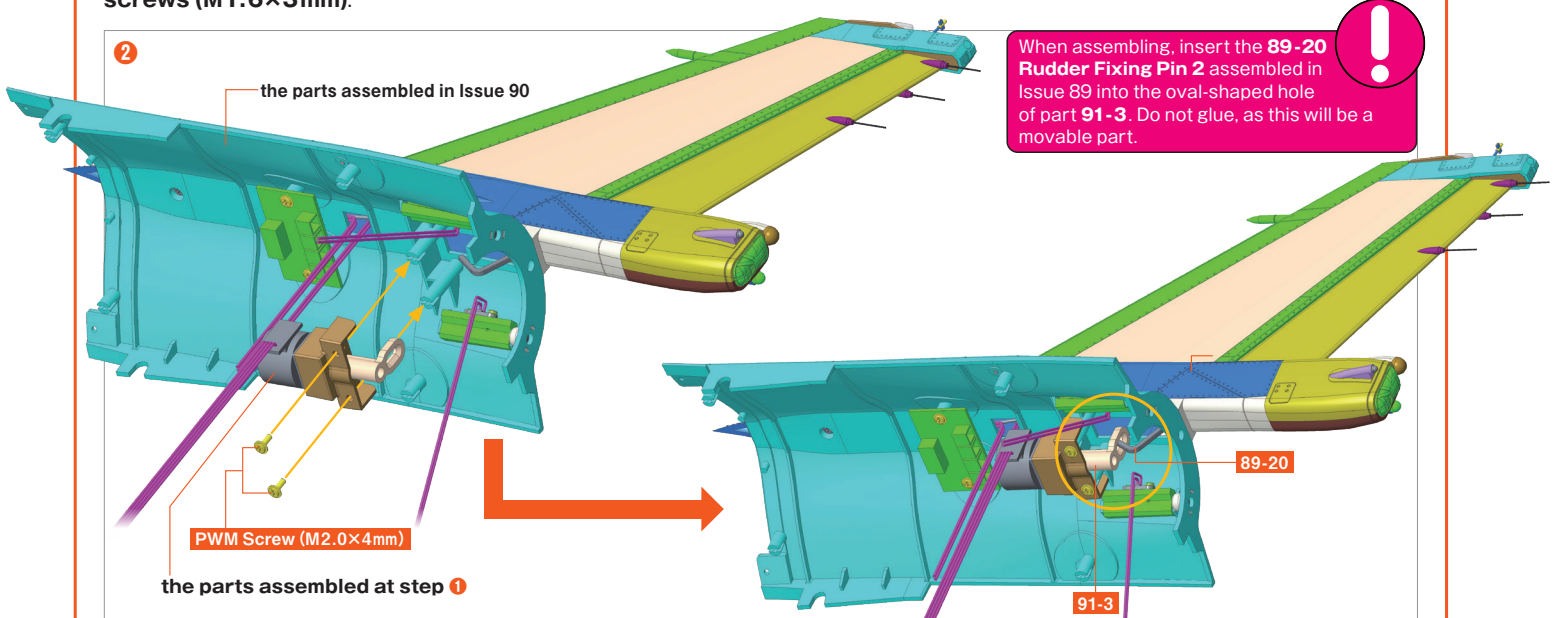

Set the motor assembled in step **1** into the completed part from Issue 90, and secure it in two places with **PWM screws (M2.0×4mm)**.

Complete!

The assembly for this issue is now complete. The motor for moving the tail fin rudder has been installed.

