



【Fan Favorites, Piano】

Floorboard, Back Wall, Musical Notes

【Figurine】

Schroeder 【Piano】

 
In this issue



The parts in this issue are the Floorboard, Back Wall and background Musical Notes for the 【Piano】 scene, and the figurine is Schroeder for the same scene.

FLOORBOARD, BACK WALL, MUSICAL NOTES

We will start to assemble the 【Piano】 scene by first assembling the Back Wall to the Floorboard and the Large and Small Musical Notes as the background.

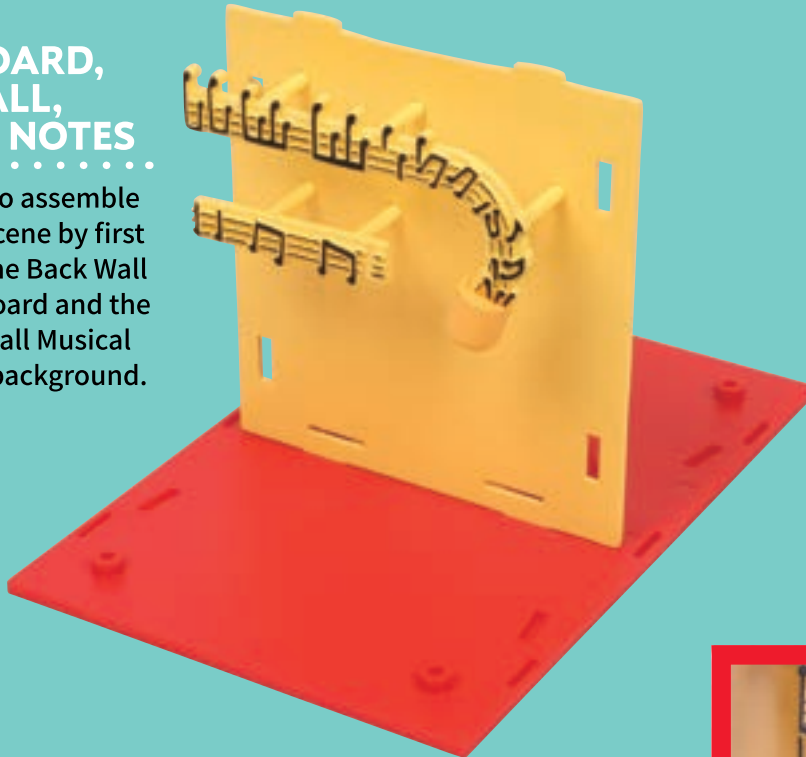


Figurine



Schroeder

 Figurine for the
【Piano】 scene

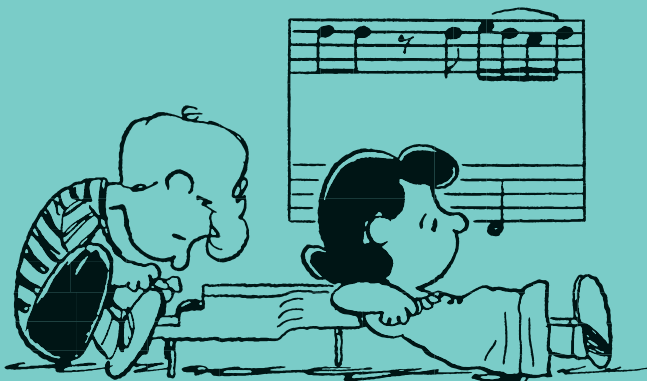

※ Actual parts may vary from the photos.



ASSEMBLY INSTRUCTIONS

 
【Fan Favorites, Piano】

Assembling the Floorboard and Back Wall
Making the Musical Notes


We will start to assemble the 【Piano】 scene by first assembling the Back Wall to the Floorboard and the Large and Small Musical Notes to the Back Wall as the background.

- ① Pin×6 ② Large Musical Notes ③ Small Musical Notes ④ Floorboard ⑤ Back Wall ⑥ Can
【Figurine】 ⑦ Schroeder


Parts of issue 66

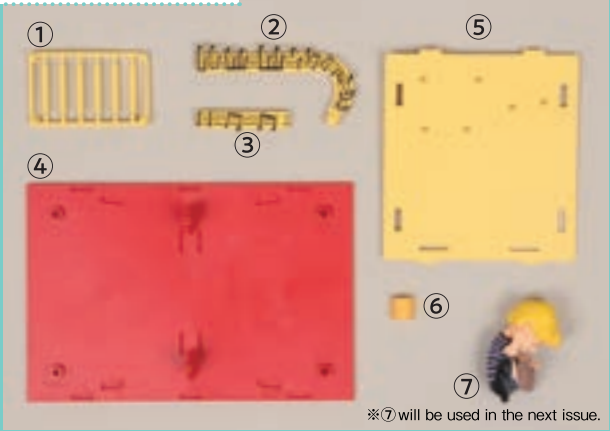


ASSEMBLING THE FLOORBOARD AND BACK WALL

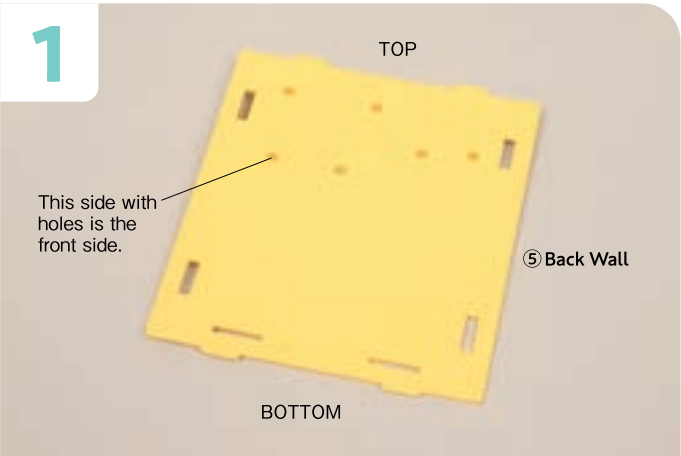 

 Check the orientation of the ⑤ Back Wall—refer to the holes to determine the correct top and bottom sides.

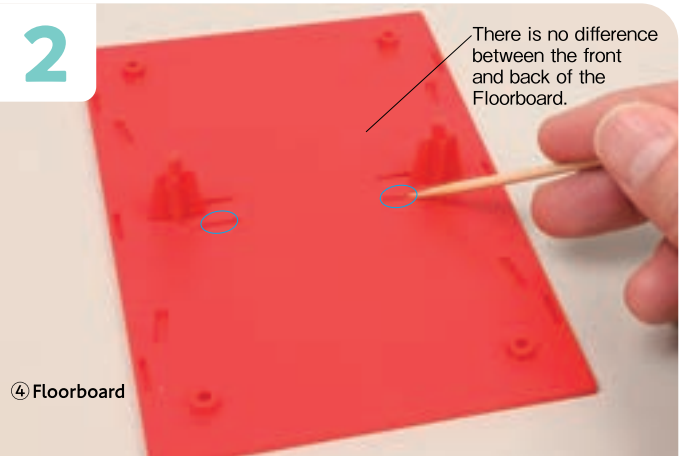

Apply a little quick-drying glue to the two grooves in the ④ Floorboard shown above using the tip of a toothpick or the like.

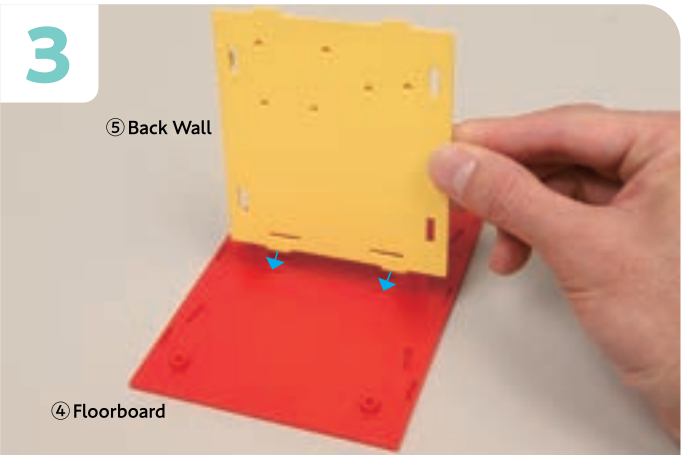

Before the glue dries, assemble the ⑤ Back Wall to the ④ Floorboard by inserting its protrusions into the grooves in the Floorboard.


Issue 66
Completed



The Back Wall is now assembled to the Floorboard of the 【Piano】 scene. Let's go on to assemble the Musical Notes on the Back Wall.




MAKING THE MUSICAL NOTES

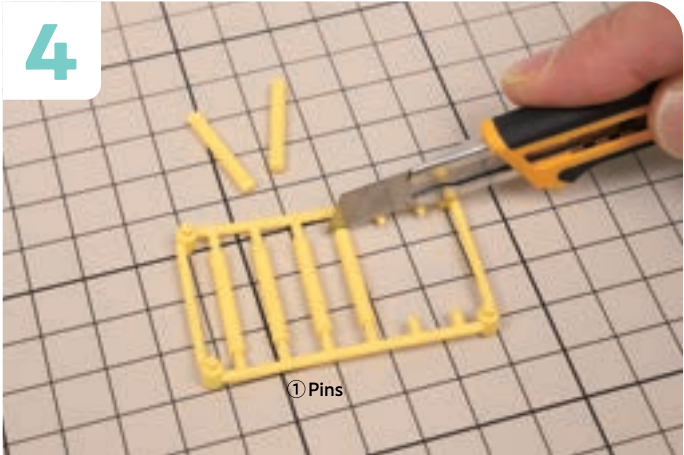



Use a cutter knife to cut the ① Pins along the seams.




There are three holes on the back of the ② Large Musical Notes and two holes on the back of the ③ Small Musical Notes.

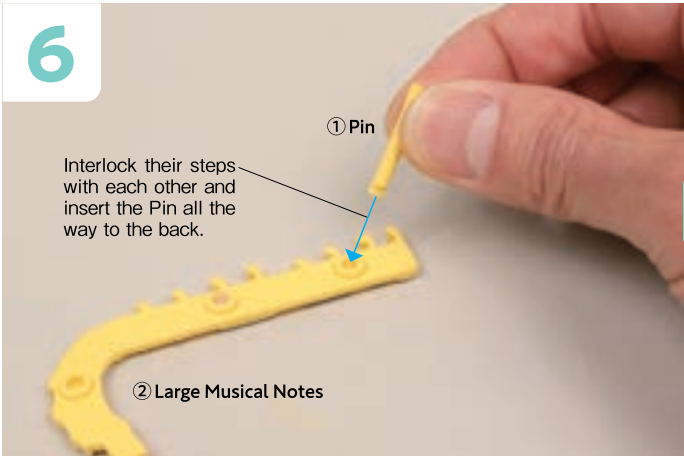

Insert a ① Pin into the hole on the back of the ② Large Musical Notes.

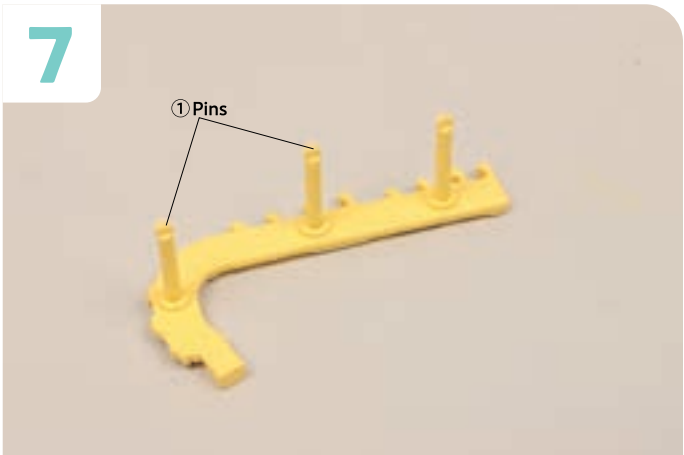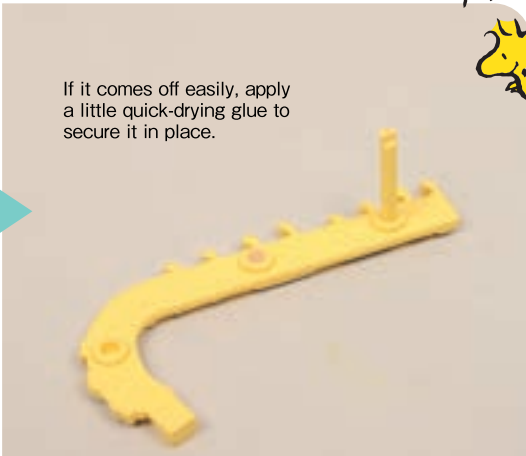

Insert one ① Pin into each of the remaining two holes in the same manner.

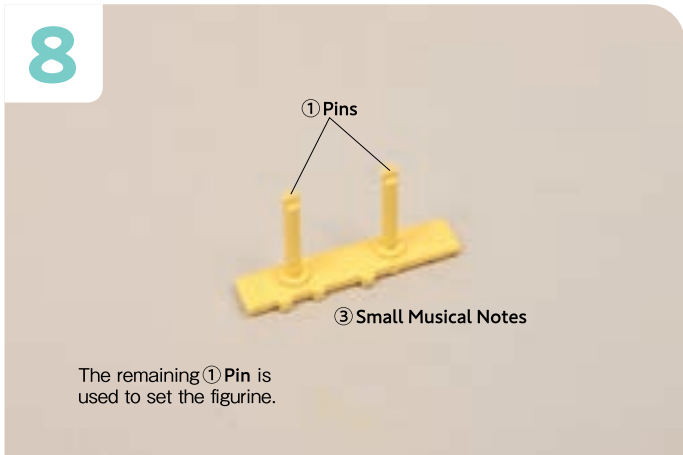


Then insert one ① Pin into each of the holes on the back of the ③ Small Musical Notes.

【Fan Favorites, Piano】









Making the Musical Notes

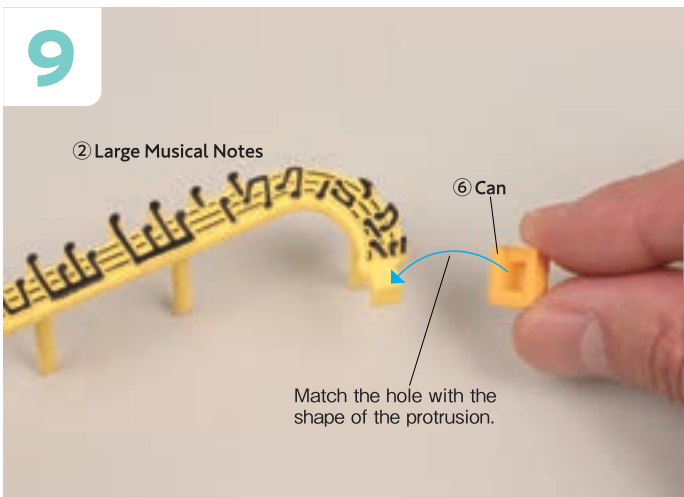

   Assemble the ⑥ Can to the right end of the ② Large Musical Notes as shown.

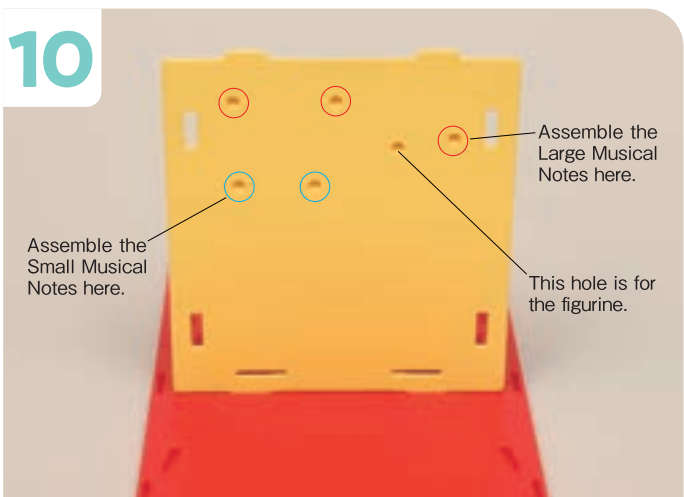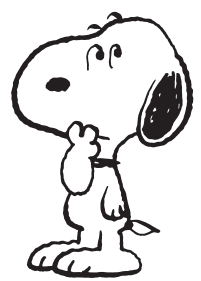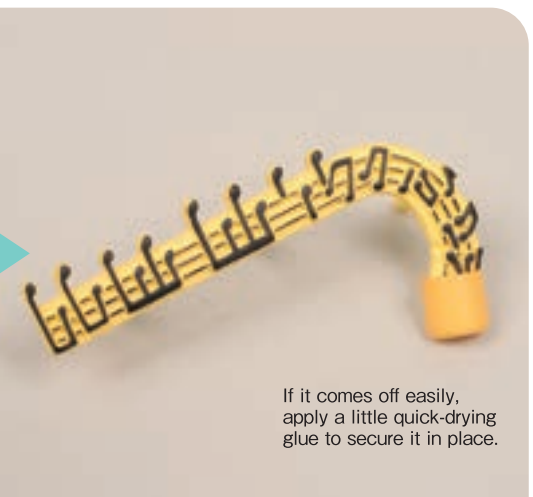

 
Identify the holes in the Back Wall assembled to the Floorboard.

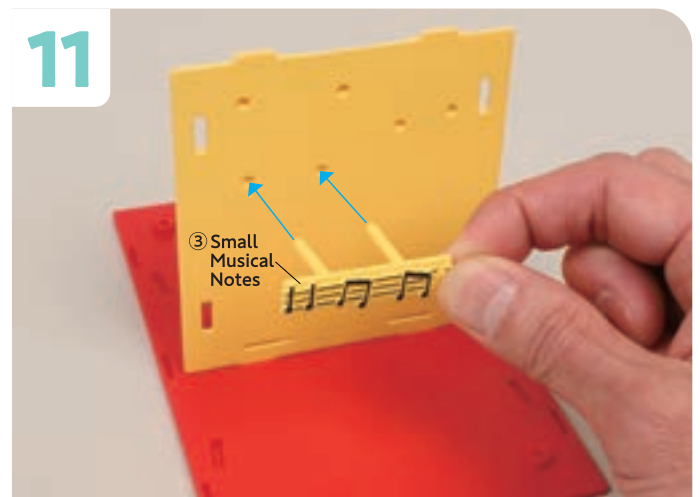

Assemble the ③ Small Musical Notes to the Back Wall by inserting its rear Pins into the two holes shown above.



Insert the Pins all the way to the back of the holes. If they come off easily, apply a little quick-drying glue to secure them in place.

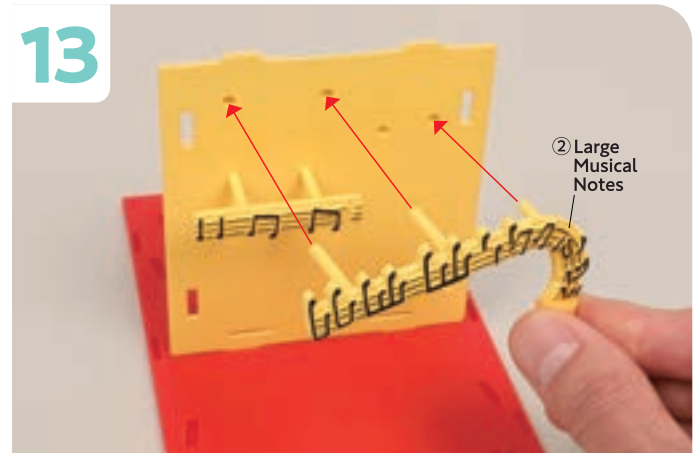

Similarly, assemble the ② Large Musical Notes to the Back Wall by inserting its three Pins into the three holes shown.

Making the Musical Notes




Make sure the Pins are inserted all the way to the back of the holes. If they come off easily, apply a little quick-drying glue to secure them in place.


Issue 66 Completed



With the Musical Notes added to the Back Wall, the [Piano] scene is now very lively.

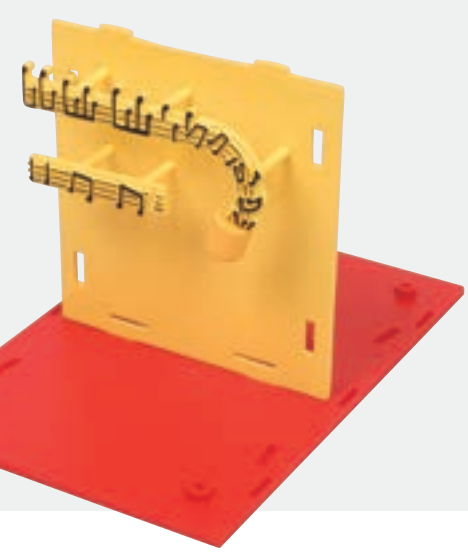

Adding the figurine

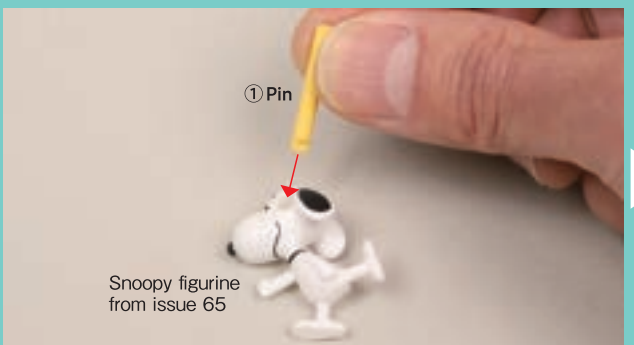

Get ready the Snoopy figurine from issue 65 and insert the remaining ① Pin into its rear hole. If it comes off easily, apply a little quick-drying glue to secure it in place.



Insert the Pin fitted into the figurine into the remaining hole in the Back Wall. If it comes off easily, apply a little quick-drying glue to secure it in place. The ⑦ Schroeder figurine will be assembled onto the Floor in the next issue.

