



【Figurine Box, Snoopy's Dad】

Left Wall and more

【Figurine Box, Andy】

Left and Right Walls, Back Wall, Ceiling Top Panel, etc.

【Figurine】

Andy 【Figurine Box】

This issue includes the Left Wall for the 【Snoopy's Dad】 box, and the surrounding Walls, background Cloud and Andy figurine for the 【Andy】 box.

In this issue



LEFT WALL AND MORE

We will complete the lower Figurine Box on the upper right side of the doghouse by assembling the Left Wall and Ceiling Top Panel and running the Cable with LED.



Figurine




Andy

Figurine for the 【Andy】 box

LEFT AND RIGHT WALLS, BACK WALL, CEILING TOP PANEL, ETC.

We will also assemble and complete the upper Figurine Box 【Andy】 on the upper right side of the doghouse by assembling the surrounding Walls to the Floorboard, as well as the Ceiling.

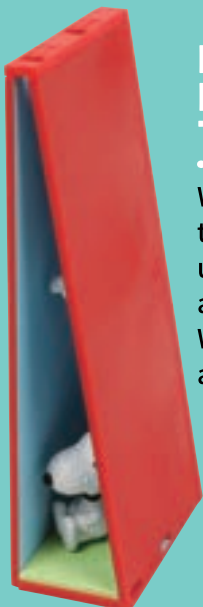



ASSEMBLY INSTRUCTIONS

【Figurine Box, Snoopy's Dad】


Assembling the Left Wall and more

【Figurine Box, Andy】

Assembling the Left and Right Walls, Back Wall, Ceiling Top Panel, etc.

In this issue, we will complete the Figurine Boxes on the upper right side of the doghouse by assembling the remaining parts like the Walls, Backboard, etc., to the previously assembled parts.

Parts of issue 90


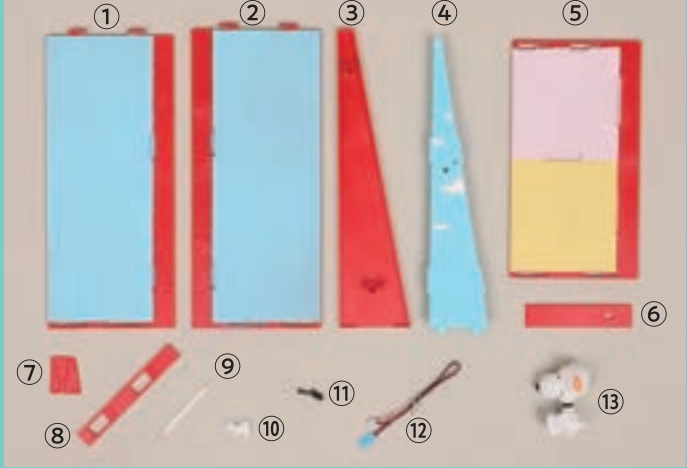


- ① Left Wall ② Right Wall ③ Backboard ④ Back Wall ⑤ Lower Left Wall ⑥ Inner Panel A ⑦ Inner Panel B
- ⑧ Ceiling Top Panel ⑨ Pin ⑩ Cloud ⑪ Screw (PB2×6mm)×3 (1 for spare) ⑫ Cable with LED 【Figurine】 ⑬ Andy


ASSEMBLING THE LEFT WALL AND MORE



Get ready the lower Figurine Box assembled in issue 89, and assemble the ⑤ Lower Left Wall to the left side by inserting the Floorboard's protrusions into the holes in the wall and sliding the wall forward.

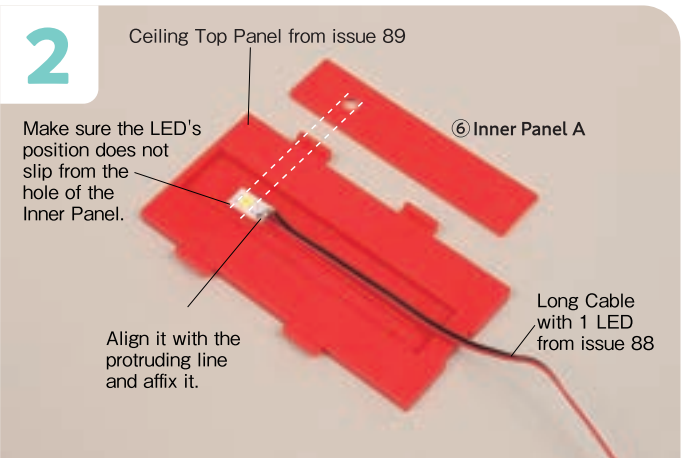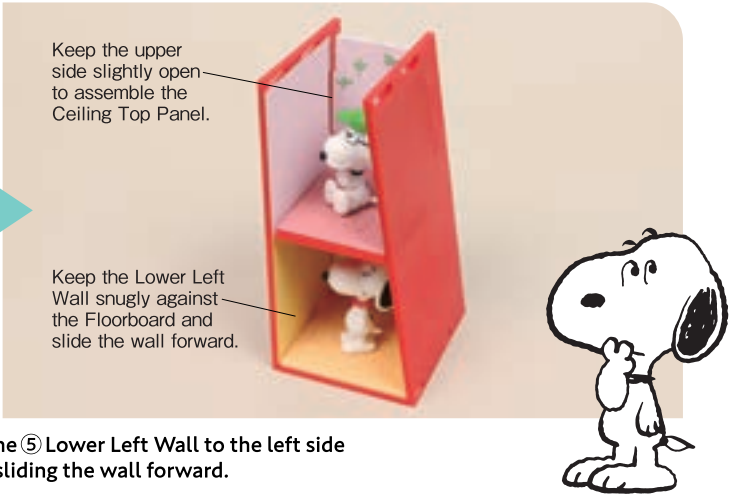

Affix the Long Cable with 1 LED from issue 88 to the Ceiling Top Panel from issue 89 as shown.

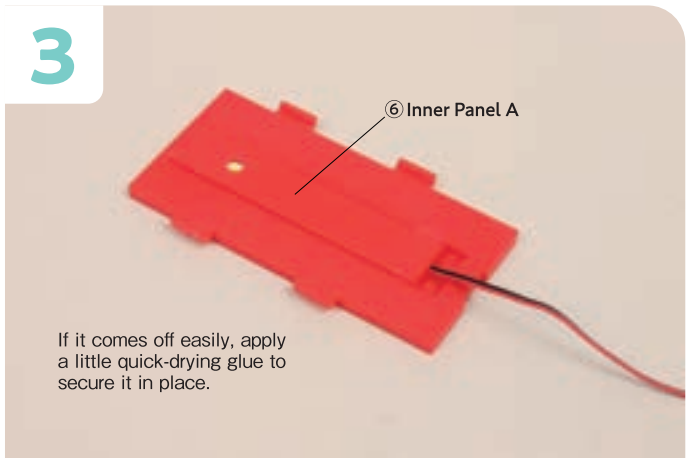


To prevent the cable from sagging, fit it between the rail-like protrusions of the Ceiling Top Panel and assemble ⑥ Inner Panel A from above.


Assembling the Left Wall and more




Now assemble the Ceiling Top Panel from step 3. First, insert the right-hand protrusions of the Ceiling Top Panel into the holes in the Right Wall, then insert the protrusions on the other side into the holes in the Left Wall.

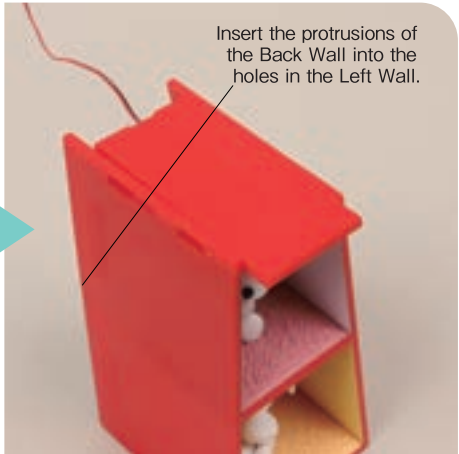


Simply slide the Ceiling Top Panel backwards to assemble it.

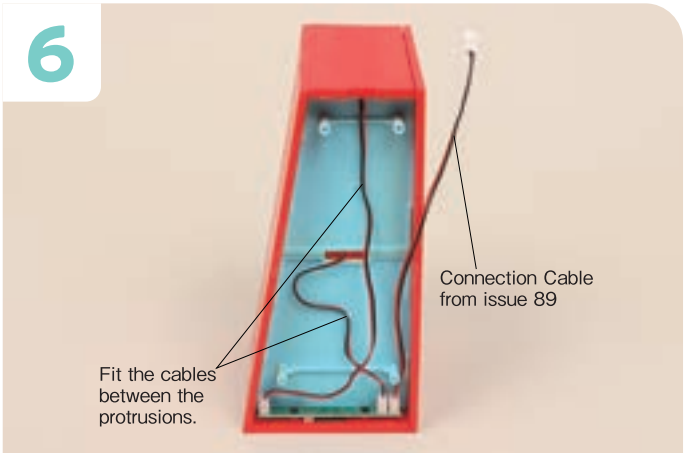

Plug the connector of the Long Cable with 1 LED coming out of the back of the Ceiling Top Panel into the socket on the Circuit Board in the position shown, and the connector of the Connection Cable from issue 89 into the socket on the opposite side.

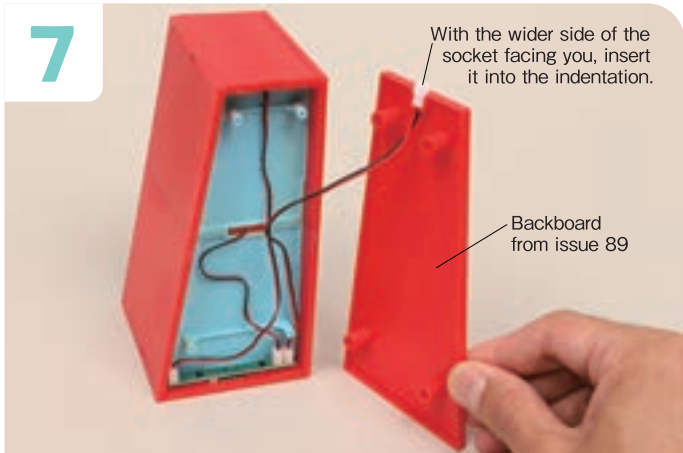

Bring the Backboard from issue 89 close to the back of the Figurine Box, and insert the socket of the Connection Cable into the indentation on its upper edge.

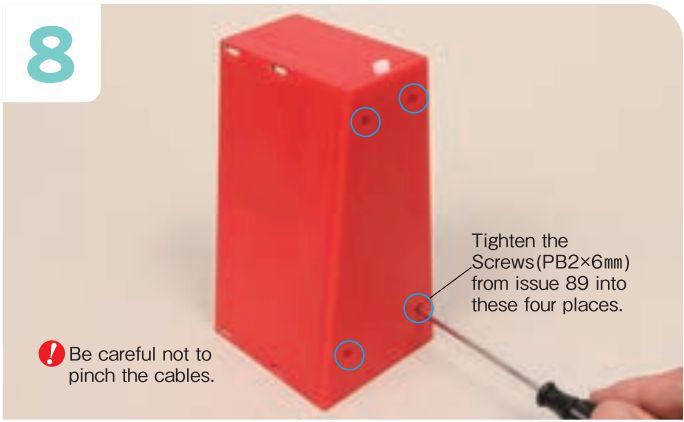

Taking care not to pinch the cables, assemble and fasten the Backboard to the Figurine Box by tightening the Screws (PB2×6mm) from issue 89 into the four places circled in blue.

Issue 90 Completed




That finishes the lower Figurine Box on the upper right side of the doghouse. Let's go on to assemble the upper Figurine Box【Andy】.







ASSEMBLING THE LEFT & RIGHT WALLS, BACK WALL, CEILING TOP PANEL, ETC.

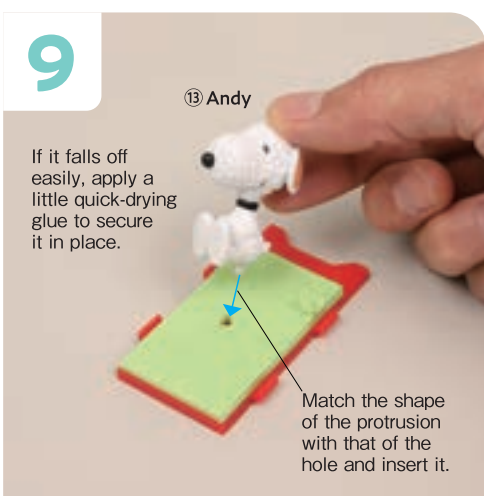


Get ready the Floorboard assembled in issue 89 and assemble the 13 Andy figurine onto the Floor.

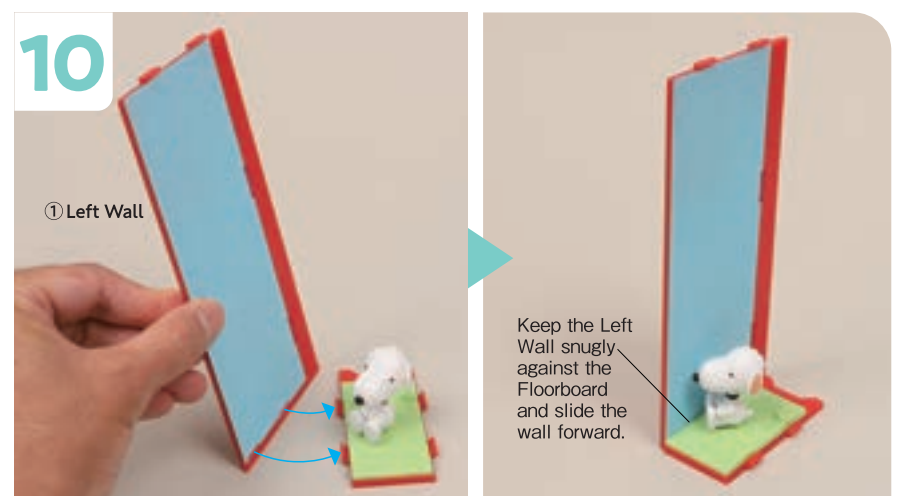


Assemble the 1 Left Wall to the left side of the Floorboard by inserting the Floorboard's protrusions into the holes in the wall and sliding the wall forward.

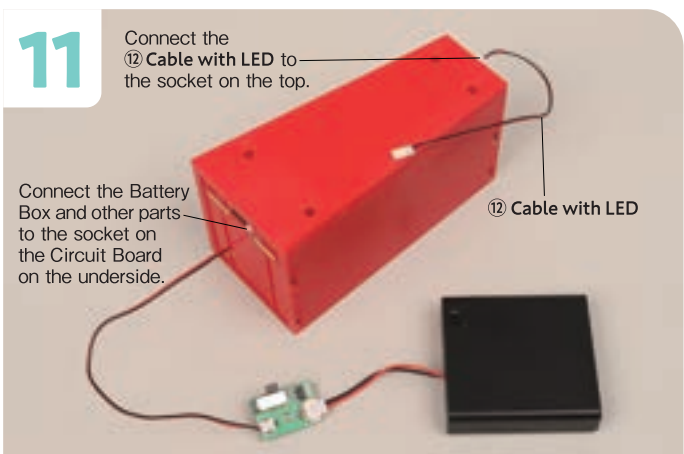


Get ready the lower Figurine Box, and connect the 12 Cable with LED to the socket on the top and the Battery Box and other parts to the socket on the Circuit Board on the underside.

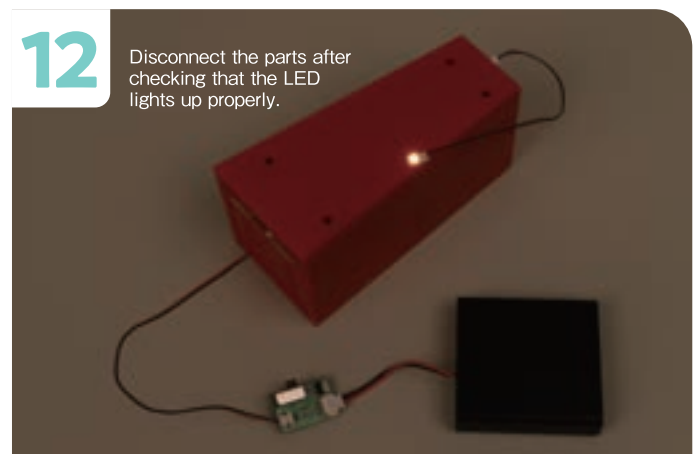

Turn on the switch on the Circuit Board for the Battery Box, and check that the LED of the 12 Cable with LED lights up properly.

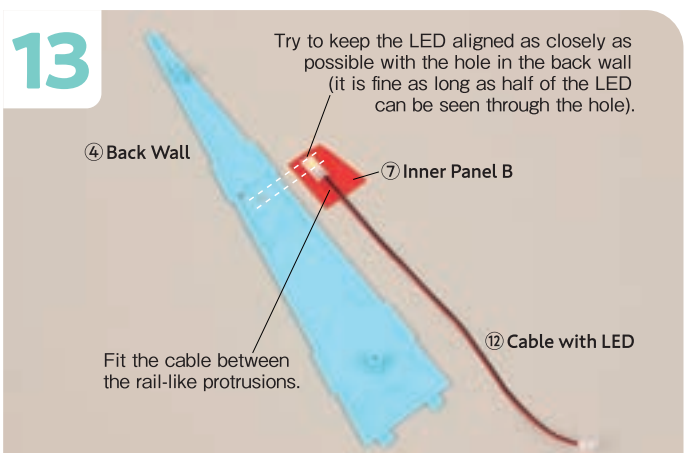


Affix the 12 Cable with LED onto the 7 Inner Panel B as shown.

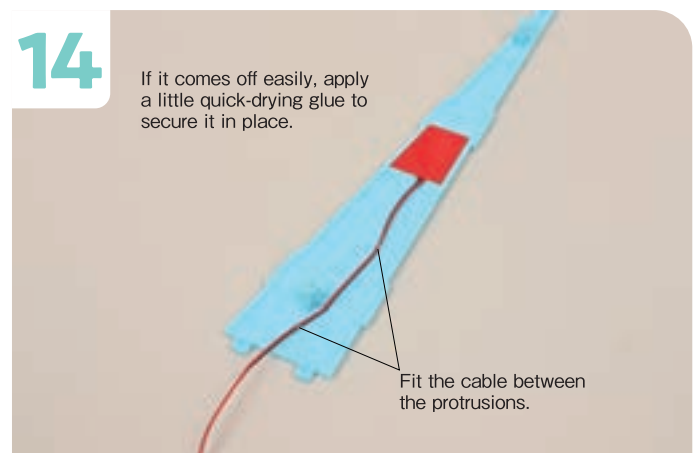


Assemble the 7 Inner Panel B onto the 4 Back Wall as shown.

Assembling the Left and Right Walls, Back Wall, Ceiling Top Panel, etc.

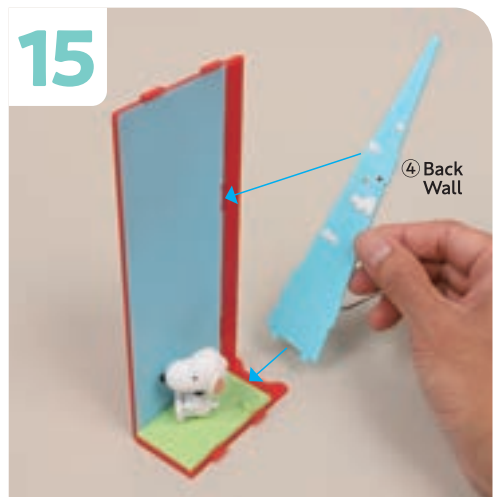


Assemble the 4 Back Wall to the assembled parts from step 10 by inserting its protrusions into the holes in the Floorboard and Left Wall as shown.

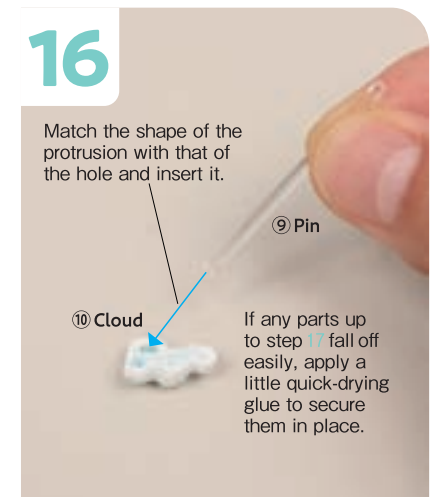


Insert one end of the 9 Pin into the back of the 10 Cloud.




Insert the other end of the Pin into the hole in the Back Wall in the position shown.

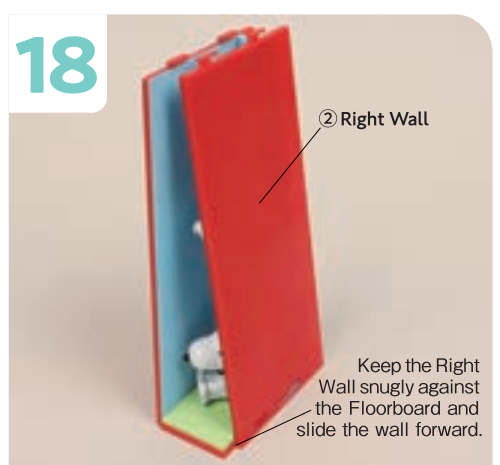

Assemble the 2 Right Wall to the right side of the Floorboard as in step 10.

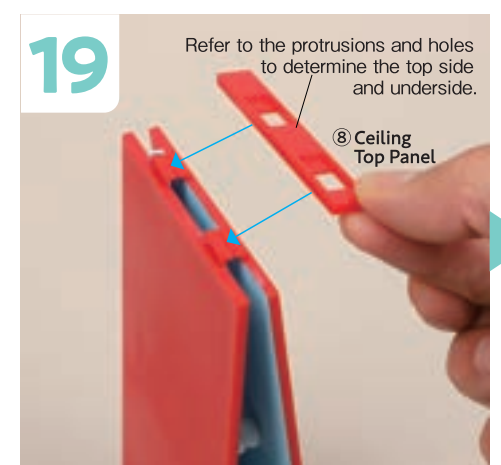

Now assemble the 8 Ceiling Top Panel onto the top of the Left and Right Walls. Align the top protrusions of the Left and Right Walls and insert them into the holes in the Ceiling Top Panel (see left photo), then slide the Ceiling Top Panel forward to snap the protrusions into place (see right photo).

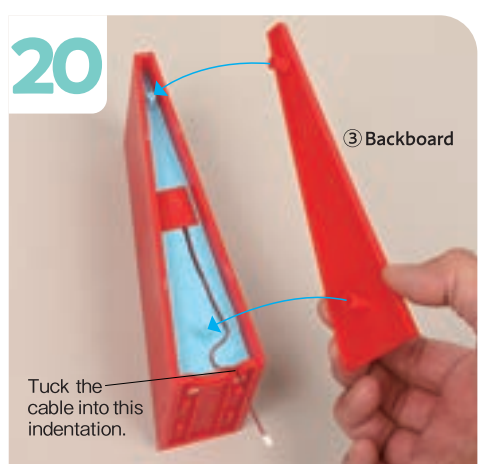

Assemble the 3 Backboard to the back of the Figurine Box as shown.



Tighten the 11 Screws (PB2x6mm) into the two places circled in blue to fasten the Backboard.

