

Assemble the left wing ⑥



In this issue, we will assemble the flaperon and install the antenna. Pay close attention to handling small parts.

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

- ☐ **ABS Cement**
For joining ABS plastic parts.
- ☐ **Universal Adhesive**
For joining metal parts.
- ☐ **Modeling Nippers**
For removing parts from the model sprues.

Check!

Demonstration videos



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.



Key points for using tools and techniques.

1 Assemble the trailing edge of the left wing

1

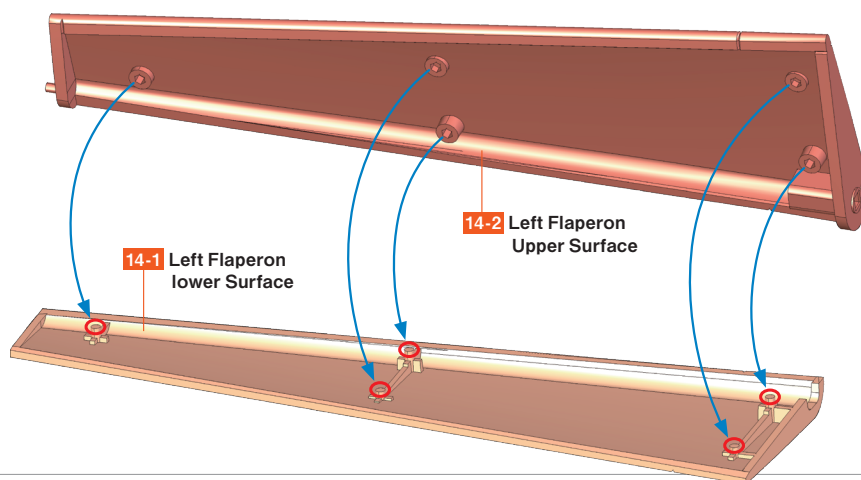


If loose when inserting, apply a small amount of ABS Cement to the back of 14-1 (the area marked with a circle) before inserting again.

Fit 14-1 Left Flaperon lower Surface and 14-2 Left Flaperon Upper Surface as shown.




2

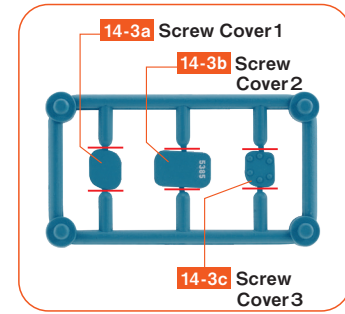

Insert **14-3b** so that the numbers are towards the wingtip side.




14-3a has a smooth surface. **14-3b** has numbers on the surface. **14-3c** has small protrusions on the surface. Check each part carefully and make sure to insert them in the correct positions as shown. If loose when inserting, apply a small amount of ABS Cement to the back of **14-3a**, **14-3b**, and **14-3c**, before inserting again.

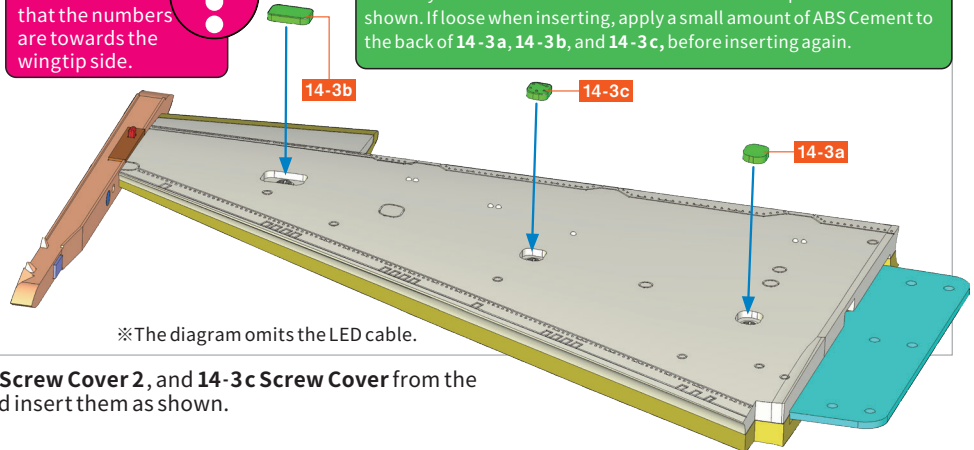

※The diagram omits the LED cable.

Cut out **14-3a Screw Cover 1**, **14-3b Screw Cover 2**, and **14-3c Screw Cover 3** from the sprue as indicated by the red lines and insert them as shown.

3

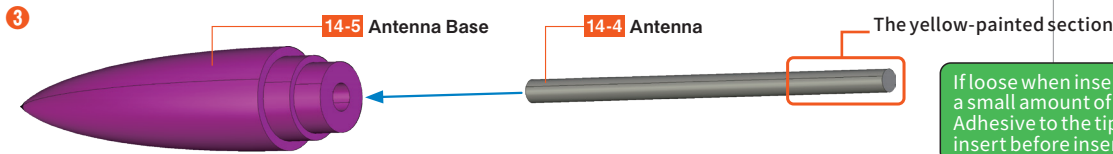


If loose when inserting, apply a small amount of Universal Adhesive to the tip of **14-4** insert before inserting again.



Insert the unpainted side of **14-4 Antenna** into **14-5 Antenna Base** as shown. Create three sets of the same.

4

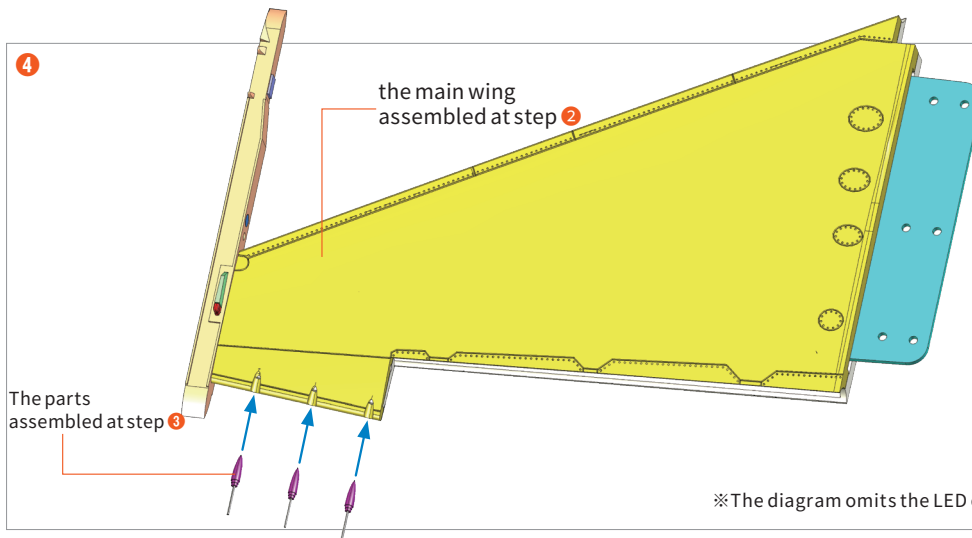

the main wing assembled at step 2

The parts assembled at step 3

※The diagram omits the LED cable.

If loose when inserting, apply a small amount of Universal Adhesive to the interfaces with the main wing on **14-5** before inserting again.



Insert the base of the three antennas created at step 3 into the main wing assembled at step 2 as shown.

Complete !

The assembly for this issue is now complete. Be careful when storing the antenna to avoid breaking it.

