


Assemble the right wing ③


In this issue, we will assemble the leading edge flaps for the right wing. These will be attached to the main wing in a later issue, so please store them carefully until then.

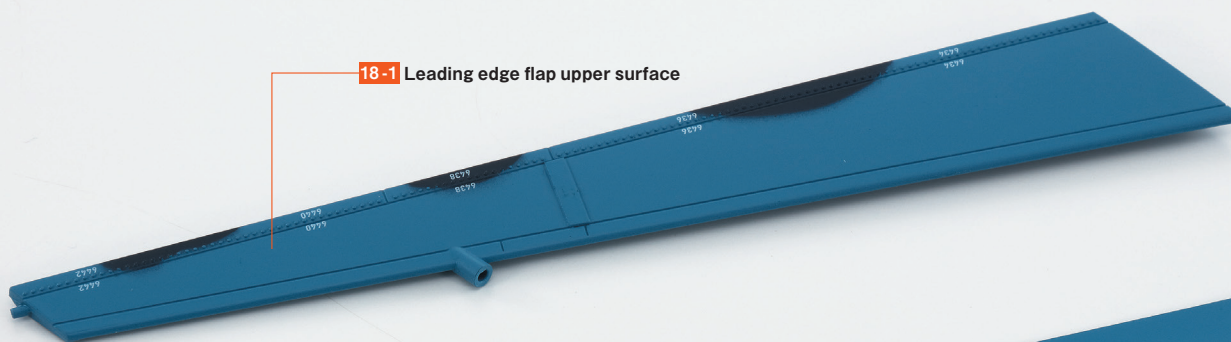


18-1 Leading edge flap upper surface



18-2 Leading edge flap lower surface

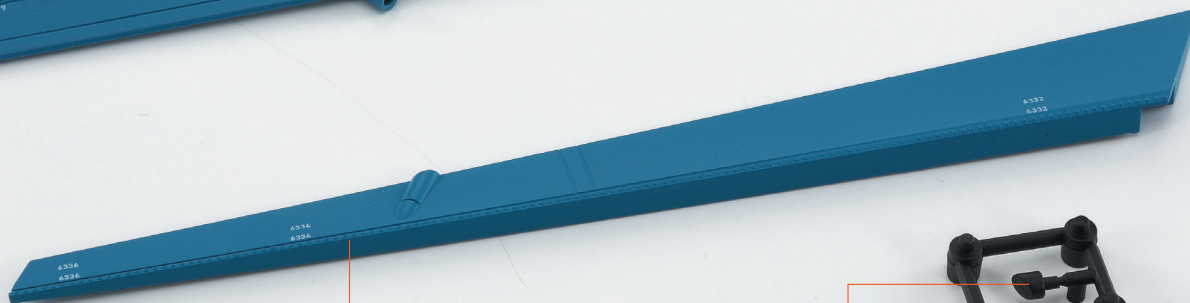

18-3 Antenna

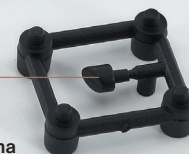

Check!

Demonstration
videos



Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.



ABS Cement

For joining ABS plastic parts.



Modeling Nippers

For removing parts from the model sprues.

Explanation of Symbols



Indicates where to
attach included
screws.



Indicates when to use
adhesive. The correct
adhesive will be indicated for
each instance.





Cautions and
Prohibitions.




Key points for using
tools and techniques.



1 Assemble the leading edge flap

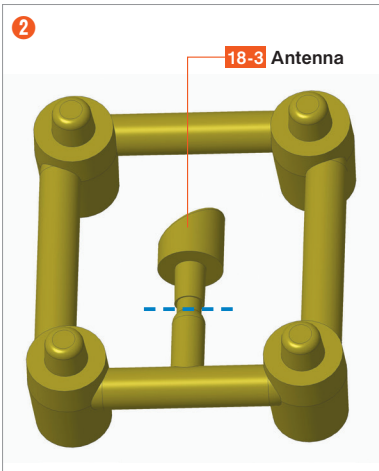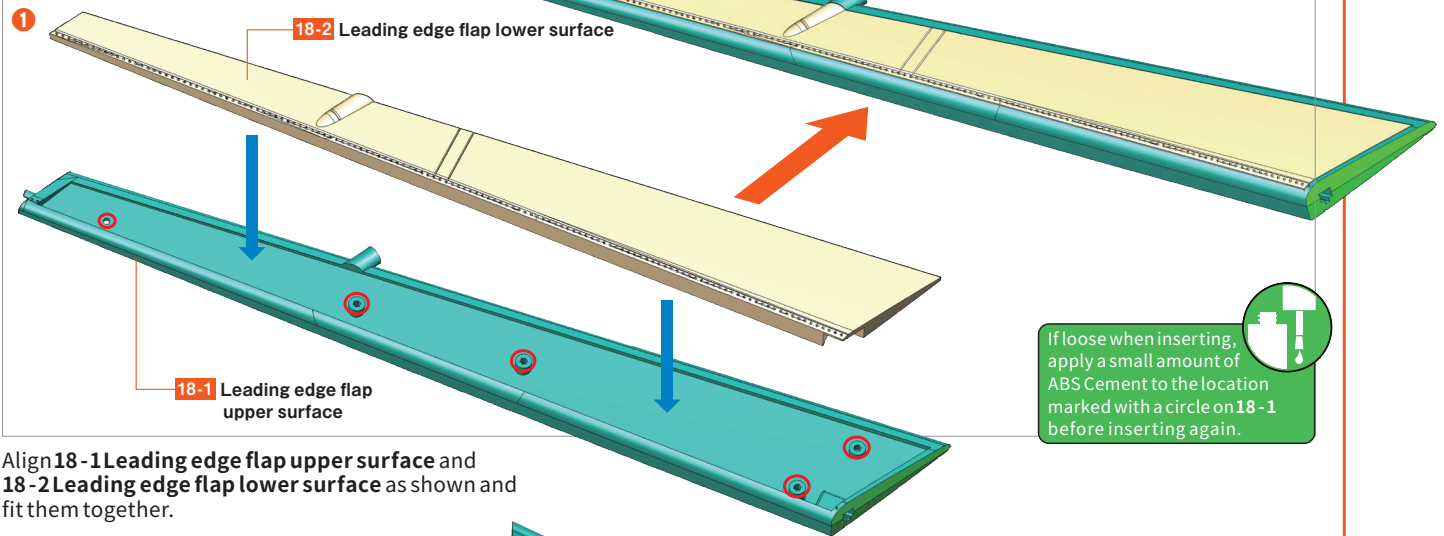

Cut **18-3** Antenna from the runner by the dashed blue line as shown.

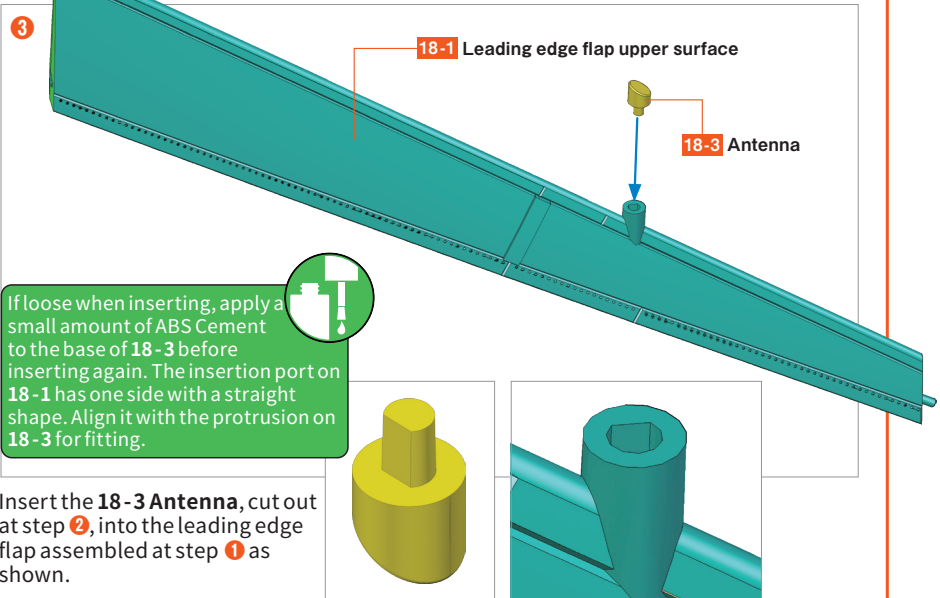

Complete !

The assembly for this issue is now complete.

