


Assemble the right wing 4

In this issue, we will attach the surface of the right wing. Please make sure to identify and mark the cables correctly before assembly.

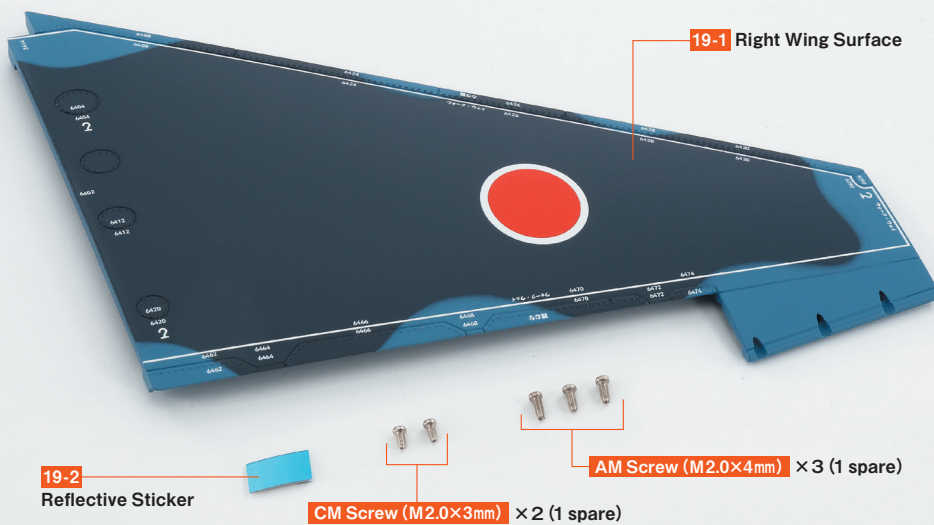

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

- ☐ **Screwdriver**
Included in Issue 1.
- ☐ **Masking tape**
For marking cables.

Check!

Demonstration videos



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.



Key points for using tools and techniques.

1 Assemble the main wing surface

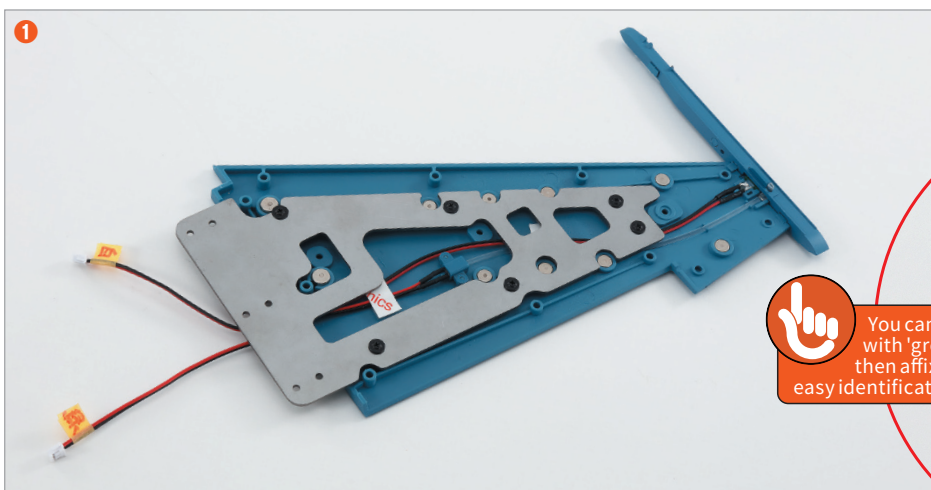


Verify the illumination of the LED lights installed in issue 16 and mark the cables at the connector ends as shown so you can easily distinguish between green and white lights.




You can label masking tape with 'green' and 'white' and then affix it to the cables for easy identification.



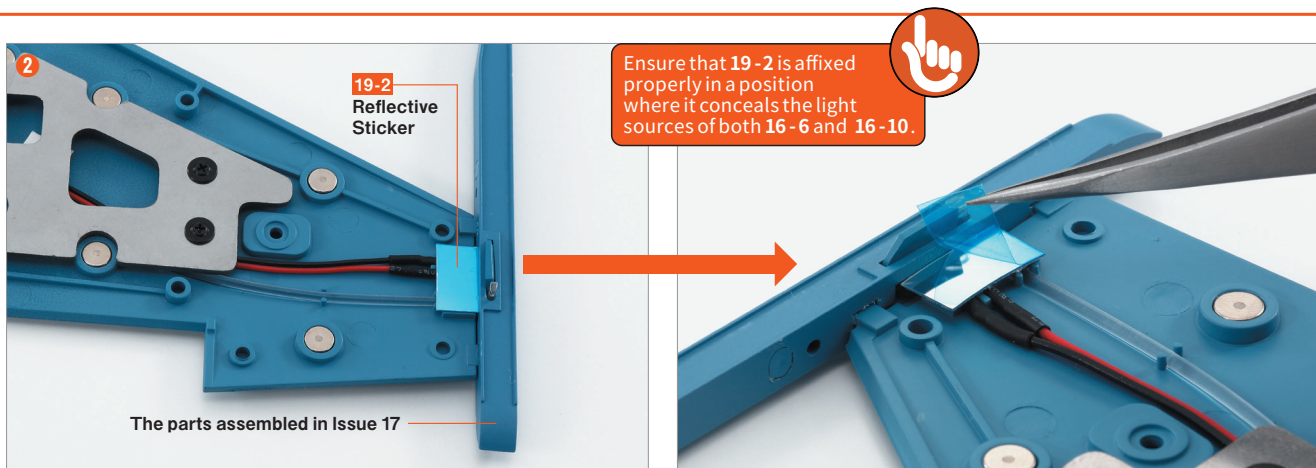

Peel off the backing paper of **19-2 Reflective Sticker**, affix them to the completed parts from issue 17 as shown, and remove the surface protective film.

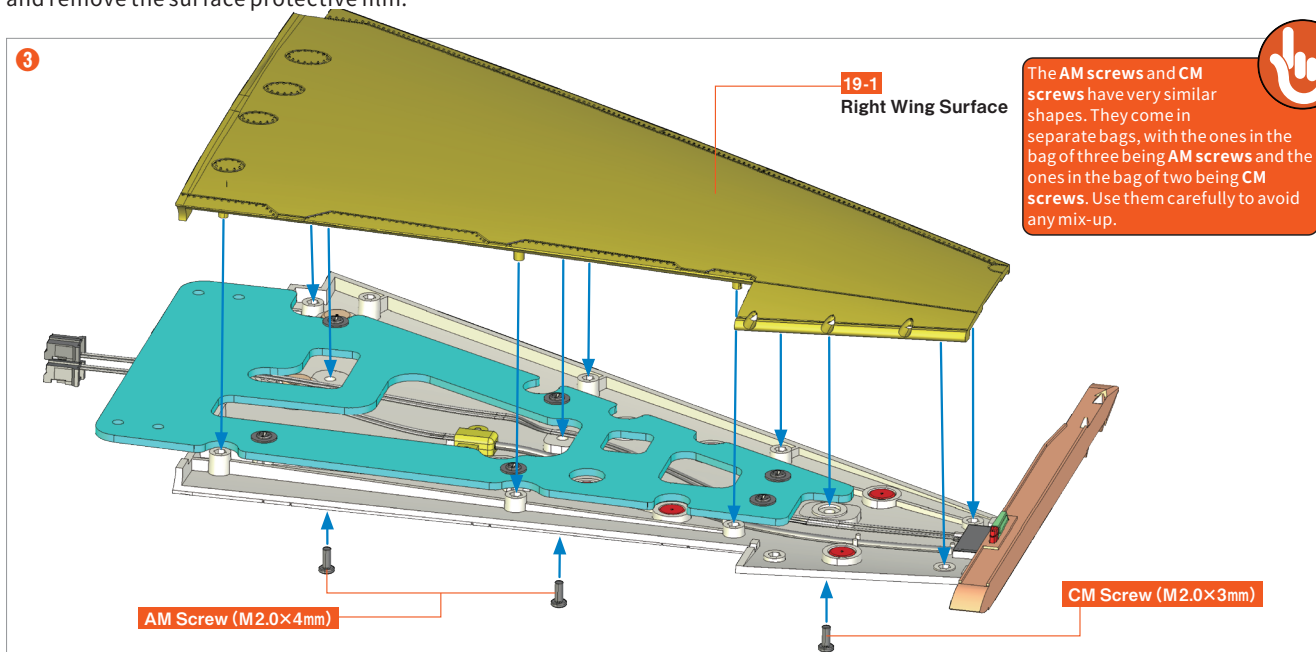

Attach **19-1 Right Wing Surface** by aligning the protrusions underneath with the holes of the parts assembled at step **2** and securing it from the underside with two AM screws (M2.0x4mm) and one CM screw (M2.0x3mm).

Complete !

The assembly for this issue is now complete.

