

# Assemble the nose ②

In this issue, we will assemble the internal radar components of the nose. Pay close attention to avoid losing any small parts.




## Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

☐ **Screwdriver**  
Included in Issue 1.

## Check!

Demonstration  
videos

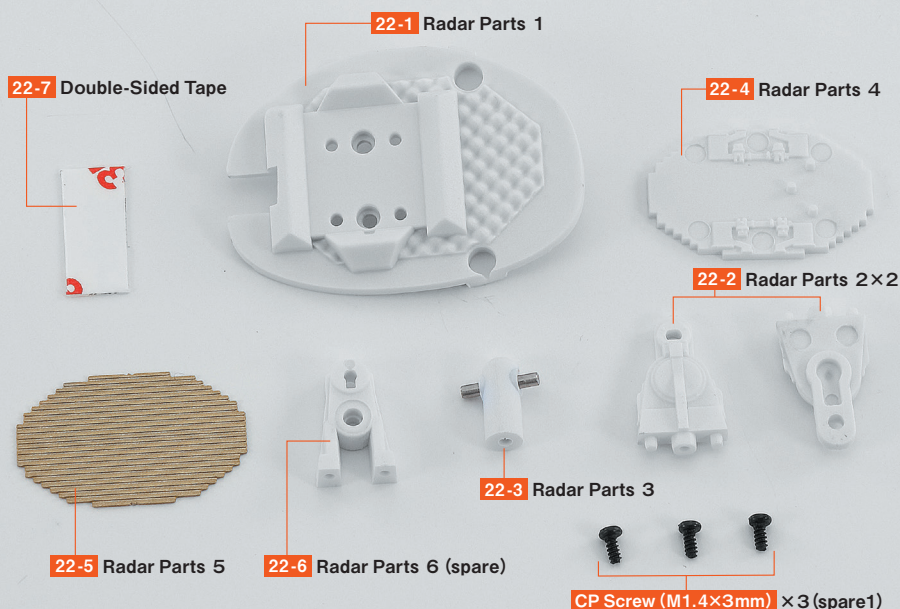

## Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.





Cautions and Prohibitions.




Key points for using tools and techniques.

## 1 Assemble the nose radar

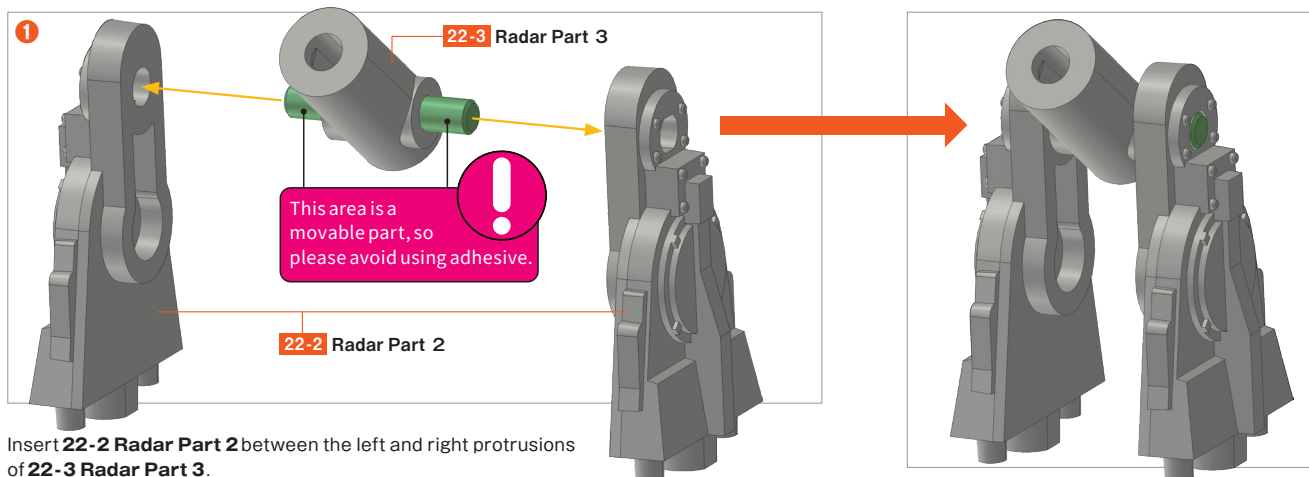


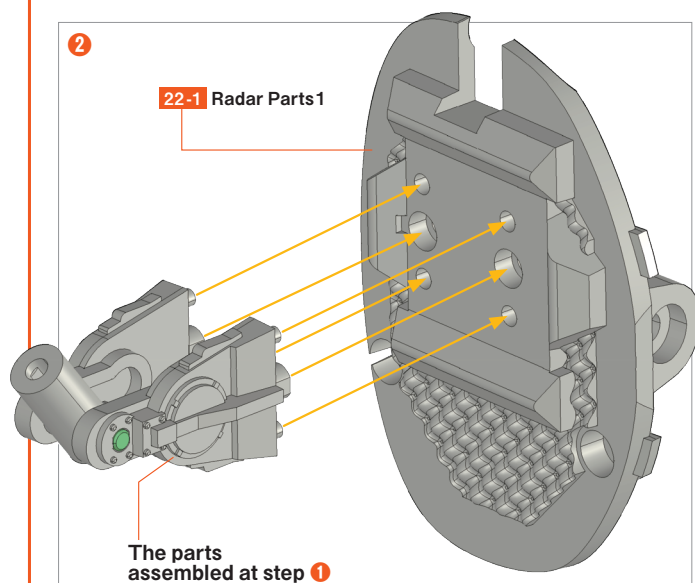


Insert the radar parts assembled in Step 1 into **22-1 Radar Parts 1** as shown.

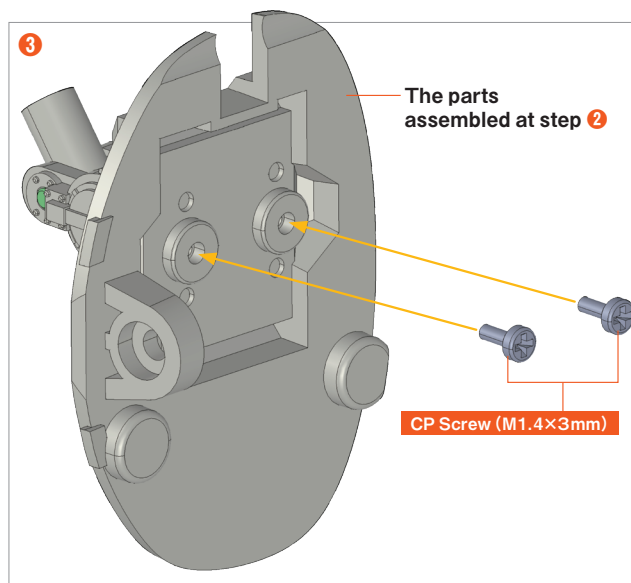

Secure the radar parts assembled in Step 2 to the rear side of Radar Parts with two **CP screws (M1.4x3mm)**.


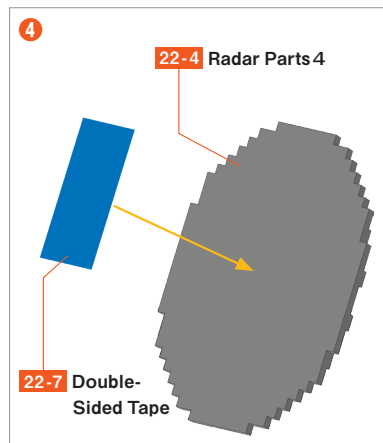


Remove one side of the backing paper from the **22-7 Double-Sided Tape** and stick it onto the flat side of the **22-4 Radar Parts 4**.

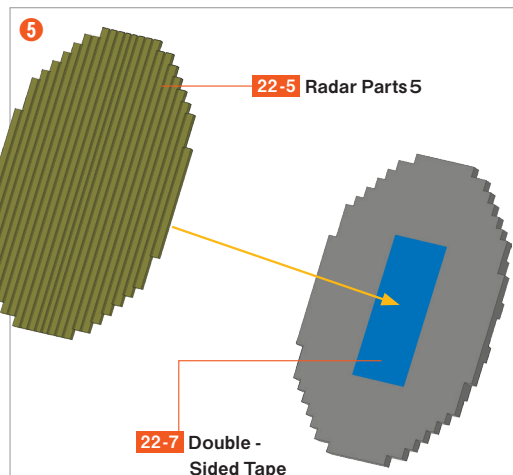

Remove the second backing paper from **22-7**, then attach it to the flat side of **22-5 Radar Parts 5**.

Align and attach **22-4** and **22-5** to ensure they fit together perfectly.

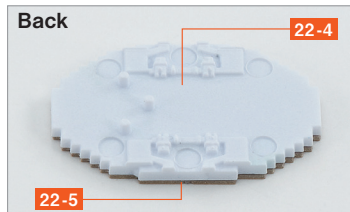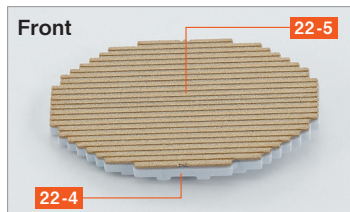

## Complete !

The assemble for this issue is now complete. In the future, we will combine these with the rest and incorporate them into the nose section. Please make sure not to lose any of the spare parts and store them safely.

