



Assemble J/AAQ-2



36-19 JAAQ-2 Parts 6



36-16 JAAQ-2 Parts 3



36-17 JAAQ-2 Parts 4



36-18 JAAQ-2 Parts 5



36-14 JAAQ-2 Parts 1



36-15 JAAQ-2 Parts 2



36-20 JAAQ-2 Parts 7



36-22 Magnet for JAAQ-2 parts x 2



The J/AAQ-2 is an infrared forward-looking surveillance device developed for the F-2, which can be mounted on the side of the air intake.

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

☐ **ABS Cement**
For joining ABS plastic parts.

☐ **Universal Adhesive**
For joining metal parts.

Check!

Demonstration videos



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.



Cautions and Prohibitions.



Key points for using tools and techniques.


1 Assemble JAAQ-2

1

36-17 JAAQ-2 Parts 4

If loose when inserting, apply a small amount of ABS Cement to the base of the parts before inserting again.

36-16 JAAQ-2 Parts 3

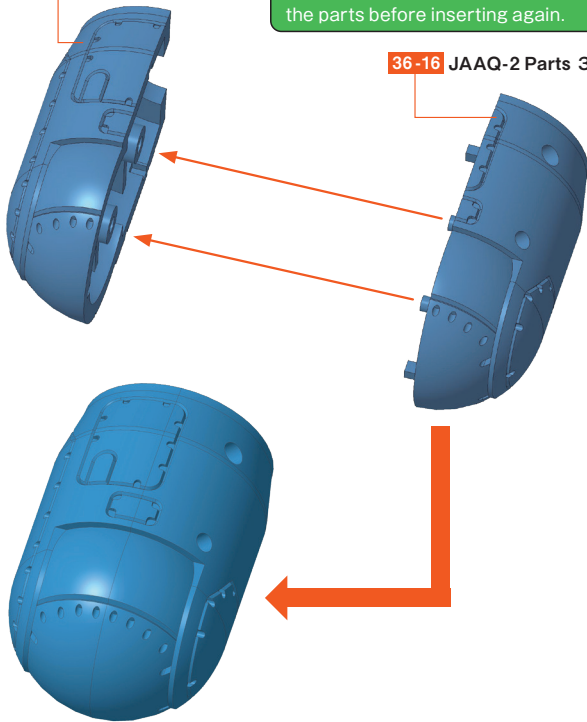

Combine 36-16 JAAQ-2 Parts 3 and 36-17 JAAQ-2 Parts 4 as shown.


2

If loose when inserting, apply a small amount of ABS Cement to the base of the parts before inserting again.

36-19 JAAQ-2 Parts 6

36-18 JAAQ-2 Parts 5

36-20 JAAQ-2 Parts 7

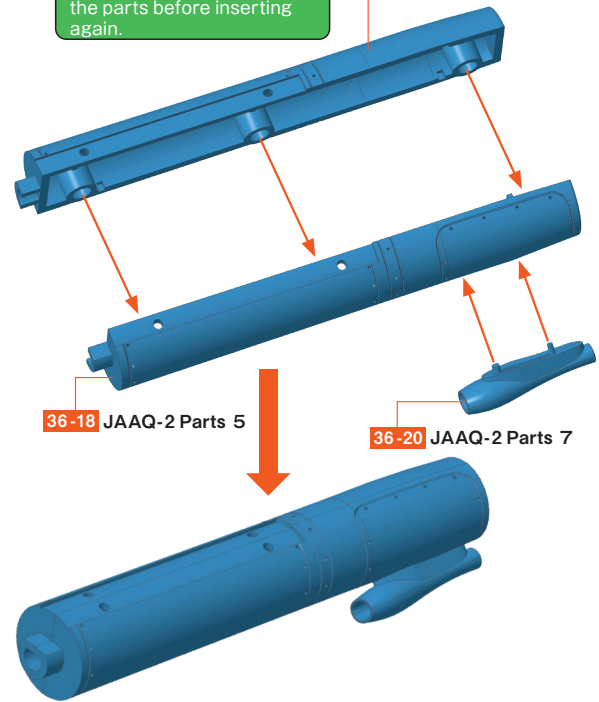

Insert 36-19 JAAQ-2 Parts 6 and 36-20 JAAQ-2 Parts 7 into the 36-18 JAAQ-2 Parts 5 as shown.


3

the parts assembled at step 1

When inserting, please align the protrusions and indentations at the bottom of the parts.

If loose when inserting, apply a small amount of ABS Cement to the base of the parts before inserting again.

Insert the parts assembled in step 1 and the parts assembled in step 2 as shown.

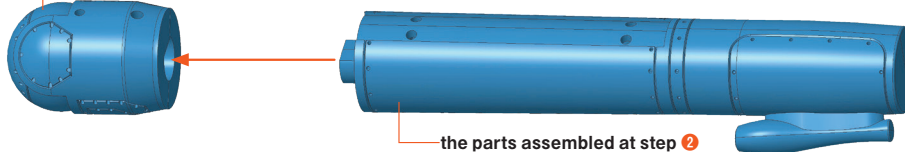

4

36-15 JAAQ-2 Parts 2

36-21 Magnet for JAAQ-2 parts × 2

Round mark

Round mark


36-21

36-14 JAAQ-2 Parts 1

the parts assembled at step 3

Part 36-21 has a specific orientation for fitting. Ensure that the side with the round mark faces inward toward part 36-14 when inserting it.

If loose when inserting, apply a small amount of ABS Cement to the base of the parts 36-14 and 36-15 before inserting again. For 36-21, apply a small amount of universal adhesive to the side marked with a round before inserting.

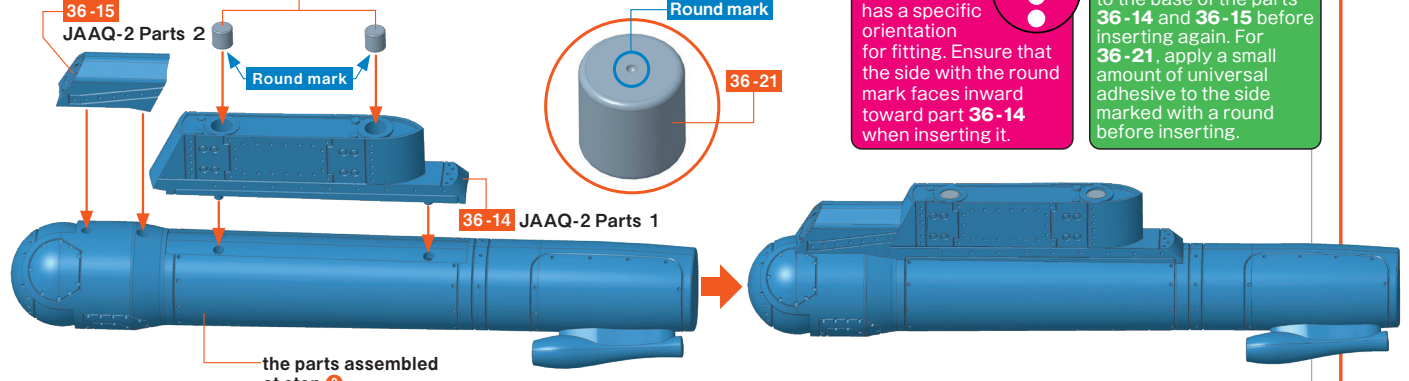

Insert 36-14 JAAQ-2 Part 1, 36-15 JAAQ-2 Part 2 and 36-21 Magnets for JAAQ-2 parts × 2 into the parts assembled in step 3 as shown.



Complete!



The assembly for this issue
is now complete.