



Assemble the lower fuselage 25

Issue 49

In this issue, we will attach the ailerons and the arresting hook. Proceed carefully to avoid damage.



49-1 Aileron 1

49-2 Aileron 2

49-5 Fuselage Part 1

49-6 Fuselage Part 2

49-7 Fuselage Part 3

49-9 Pin

49-3 Hook Base

49-8 Antenna

49-4 Arresting Hook

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.



ABS Cement

For joining ABS plastic parts.

Check!

Be sure to check the assembly video for detailed demonstrations.



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.



Key points for using tools and techniques.

1 Assemble the lower fuselage


1

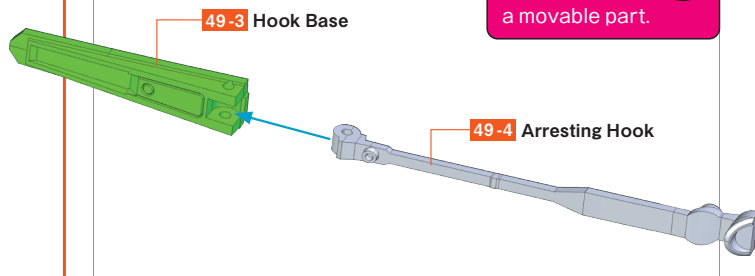

Do not glue, as this will be a movable part.

Insert the **49-4 Arresting Hook** into the **49-3 Hook Base** as shown.


2

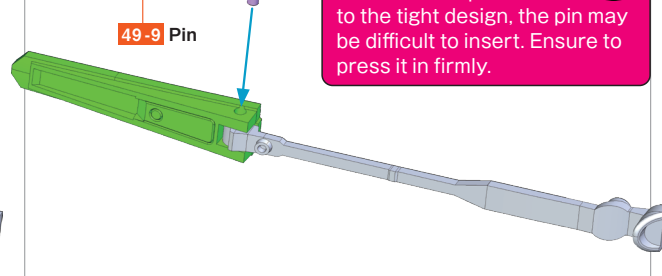

Do not glue, as this will be a movable part. Due to the tight design, the pin may be difficult to insert. Ensure to press it in firmly.

Insert the **49-9 Pin** into the Arresting Hook assembled in step 1 as shown.

3

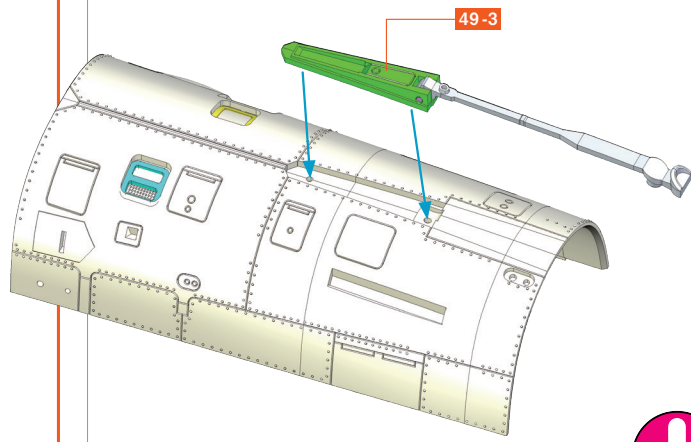


If loose when inserting, apply a small amount of ABS Cement to the back of **49-3** before inserting again.

Insert the Arresting Hook assembled in step 2 into the lower fuselage assembled in issue 48 as shown.

When inserting, check the diagram and be mindful of the front and back sides.

4

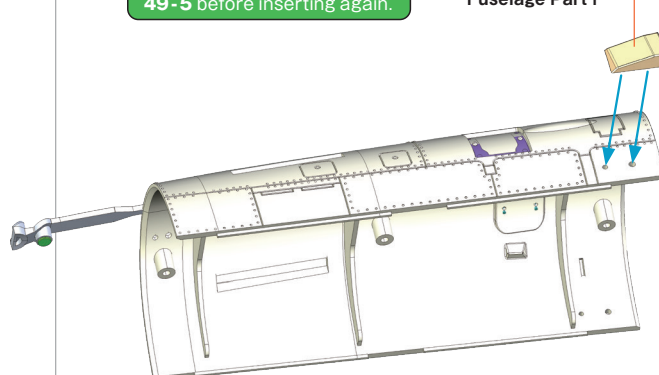


If loose when inserting, apply a small amount of ABS Cement to the protrusion on the back of **49-5** before inserting again.

Insert the **49-5 Fuselage Part 1** into the lower fuselage assembled in step 3 as shown.

On the back side of **49-5**, there is an engraving of '1'. Be careful not to mix up the parts.


5

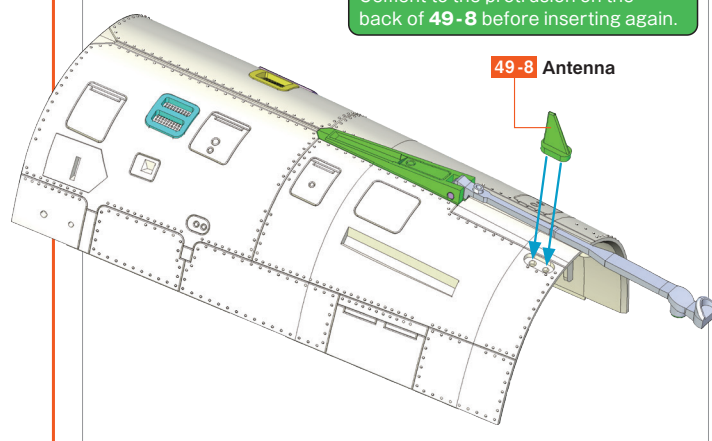

If loose when inserting, apply a small amount of ABS Cement to the protrusion on the back of **49-8** before inserting again.


Insert the **49-8 Antenna** into the lower fuselage assembled in step 4 as shown.

6

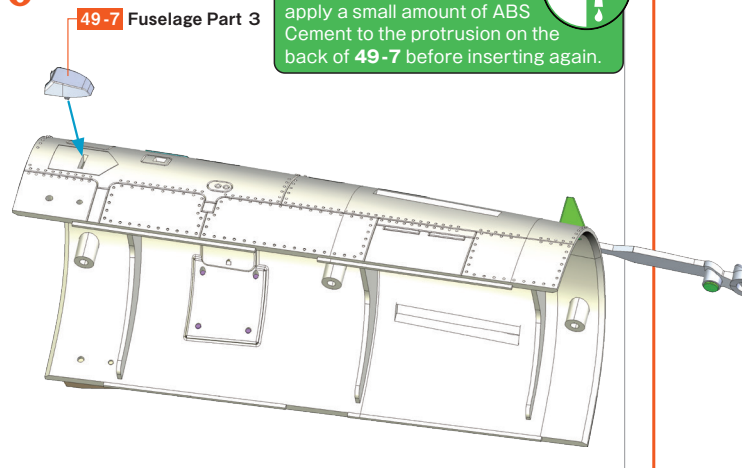


If loose when inserting, apply a small amount of ABS Cement to the protrusion on the back of **49-7** before inserting again.

Insert the **49-7 Fuselage Part 3** into the lower fuselage assembled in step 5 as shown.

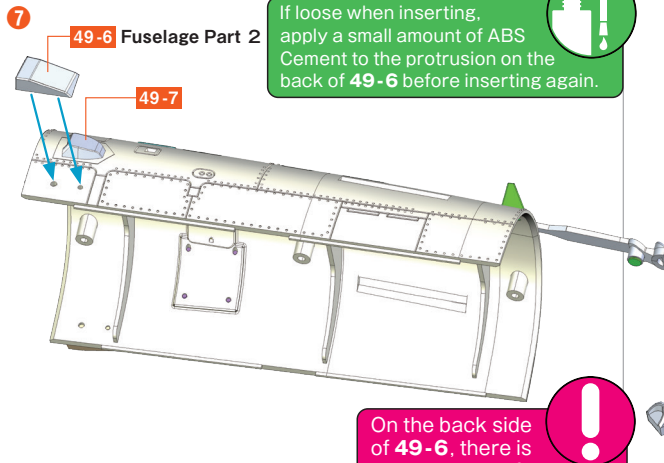


Insert the **49-6 Fuselage Part 2** into the lower fuselage assembled in step **6** as shown.

On the back side of **49-6**, there is an engraving of '2'. Be careful not to mix up the parts.

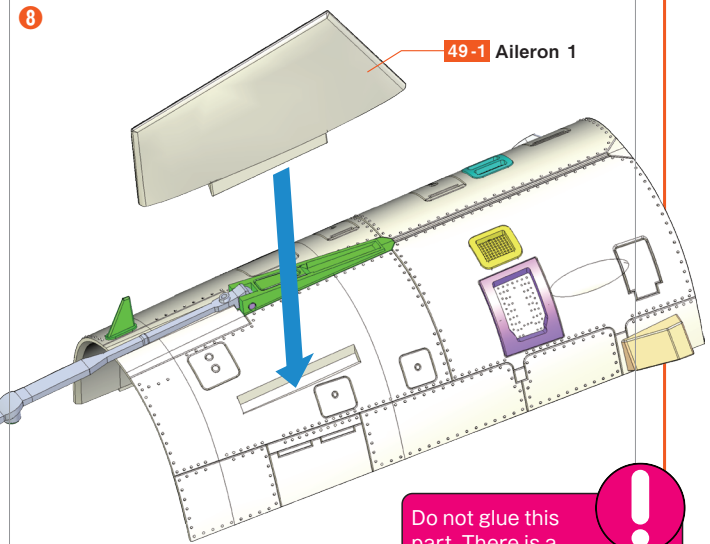

Insert the **49-1 Aileron 1** into the lower fuselage assembled in step **7** as shown.

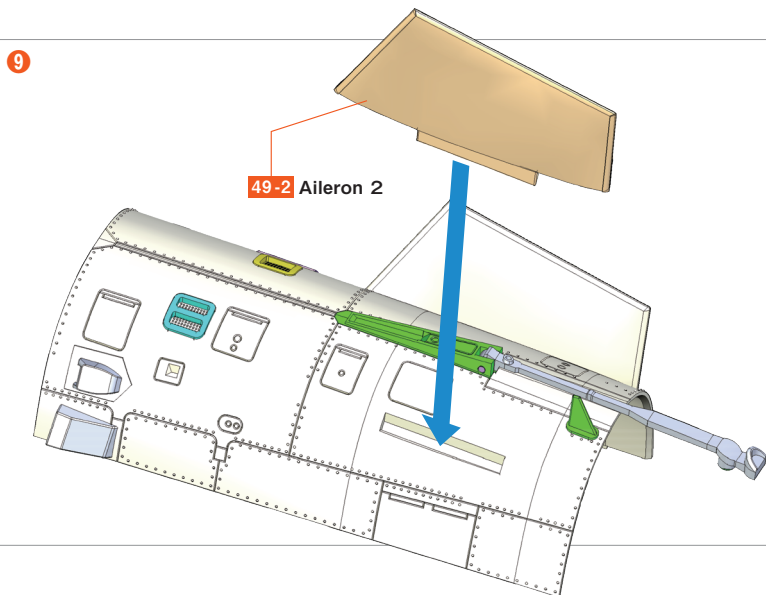

Insert the **49-2 Aileron 2** into the lower fuselage assembled in step **8** as shown.

Do not glue this part. There is a '2' engraving at the base of the **49-2** part. Be careful not to mix up the parts.

Complete!



The assembly for this issue is now complete.