
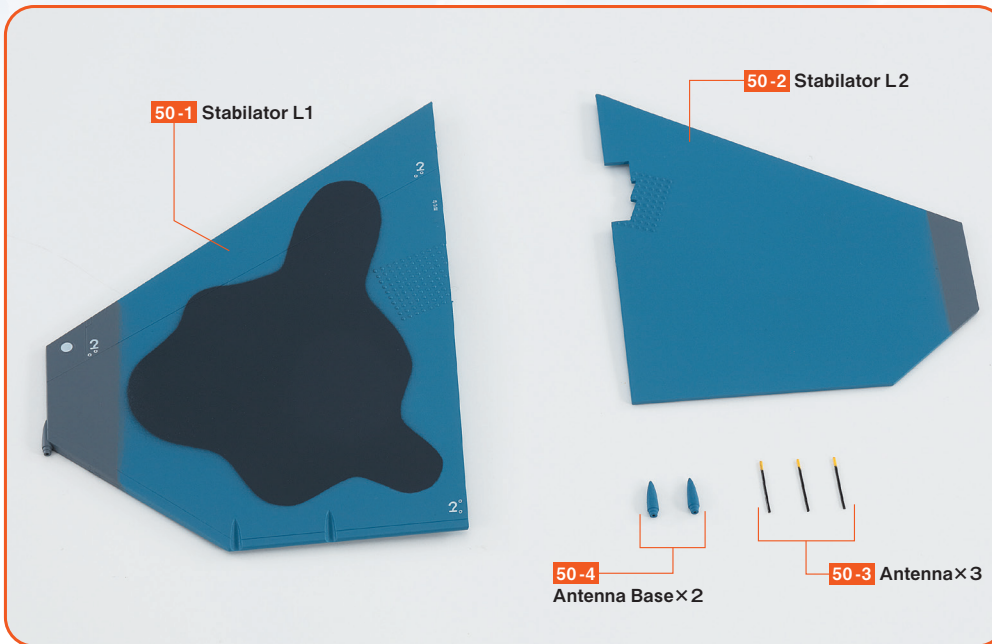


# Assemble the stabilator ①

In this issue, we will assemble the left stabilator. Be careful when handling the small parts.

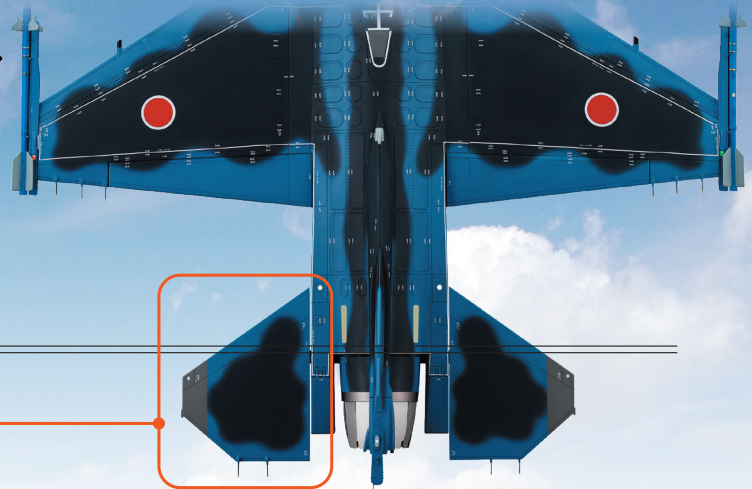

## Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

- ☐ **ABS Cement**  
For joining ABS plastic parts.
- ☐ **Universal Adhesive**  
For joining metal parts.

## Check!

Be sure to check the assembly video for detailed demonstrations.



## Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.




Key points for using tools and techniques.

## 1 Assemble the stabilator

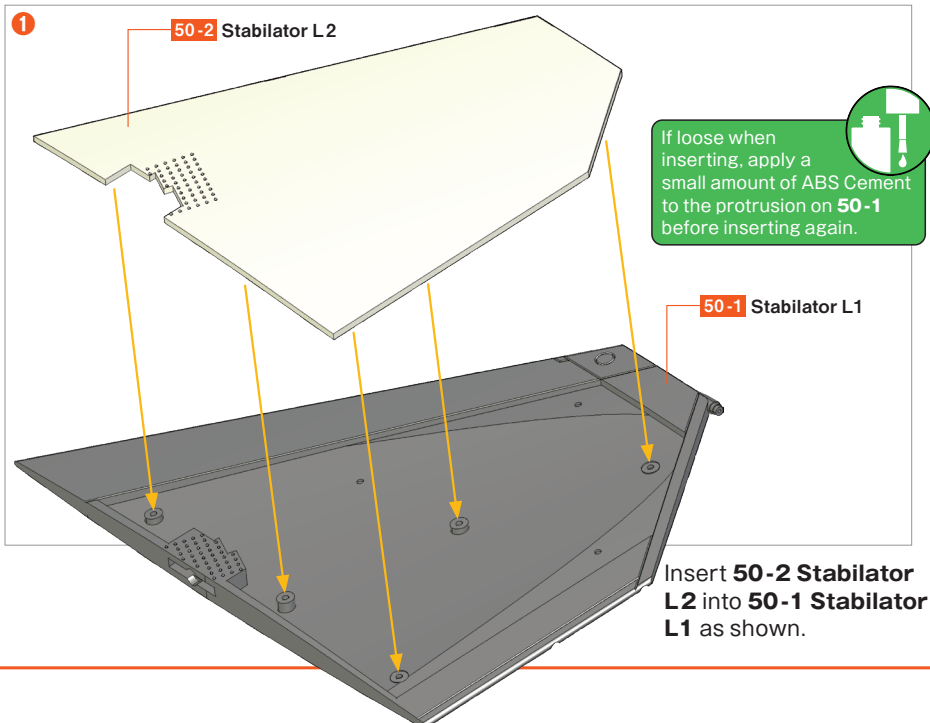



2

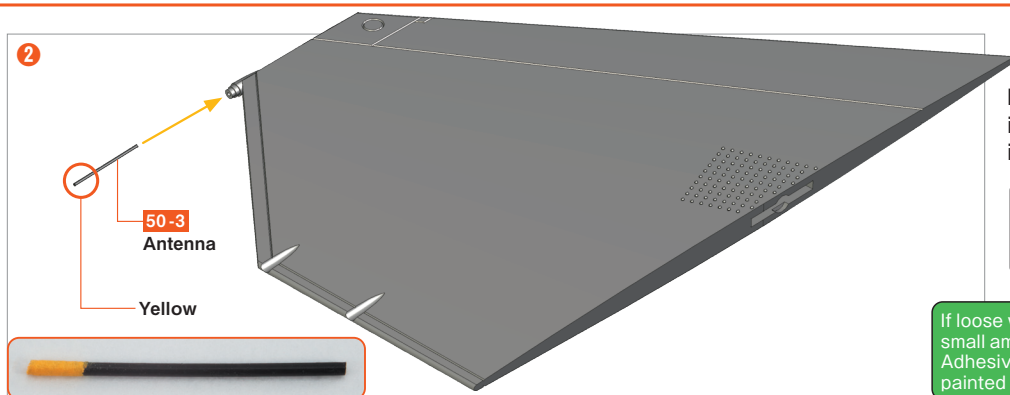


Insert one **50-3 Antenna** into the stabilator assembled in step 1 as shown.

The **50-3** part has one side painted yellow. Insert the side that is not painted yellow.

If loose when inserting, apply a small amount of Universal Adhesive to the side of **50-3** that is not painted yellow before inserting again.

3

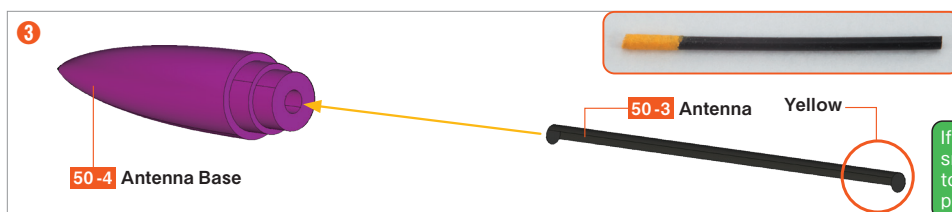


The **50-3** part has one side painted yellow. Insert the side that is not painted yellow.

If loose when inserting, apply a small amount of Universal Adhesive to the side of **50-3** that is not painted yellow before inserting again.

Insert the **50-3 Antenna** into the **50-4 Antenna Base** as shown. Prepare two of the same.


4

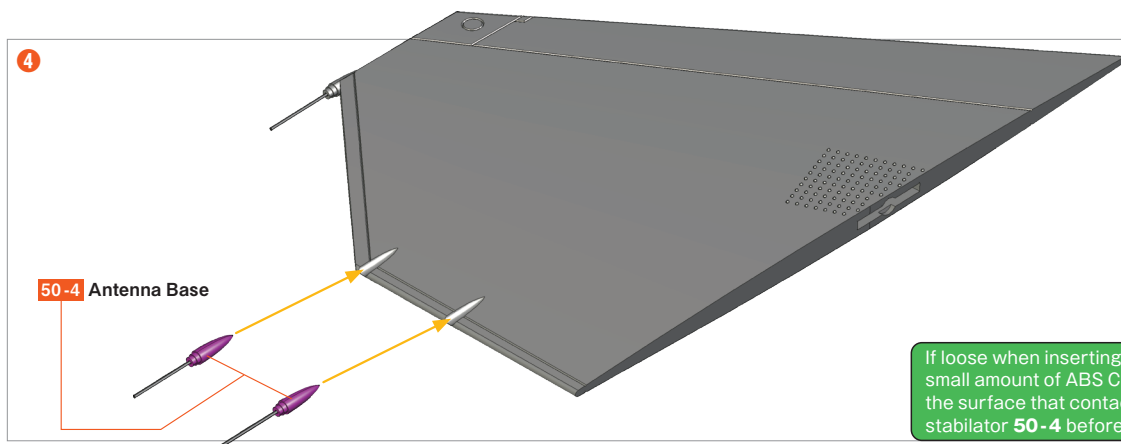

If loose when inserting, apply a small amount of ABS Cement to the surface that contacts the stabilator **50-4** before inserting.

Insert the two antennas created in step 3 into the stabilator assembled in step 2 as shown.

**Complete!**

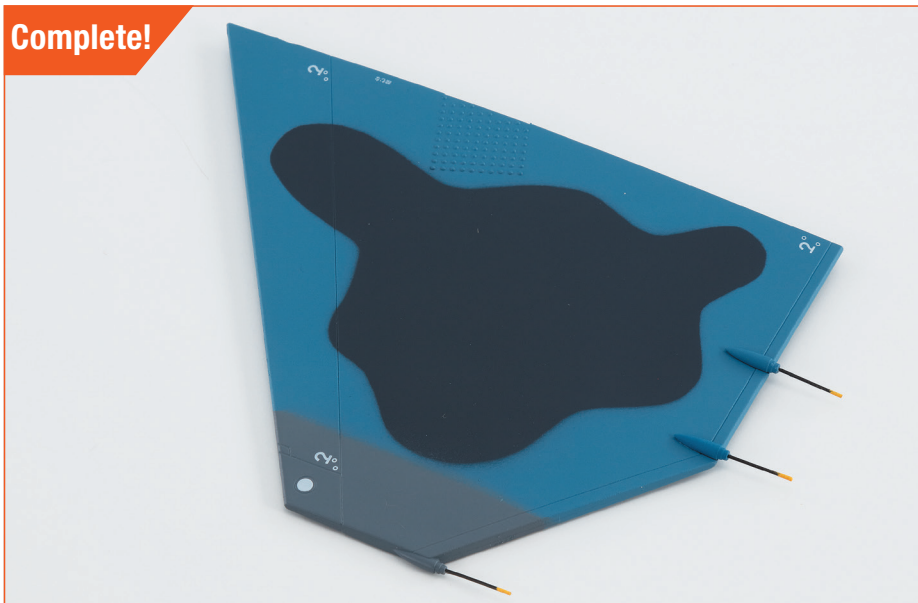

The assembly for this issue is now complete.