
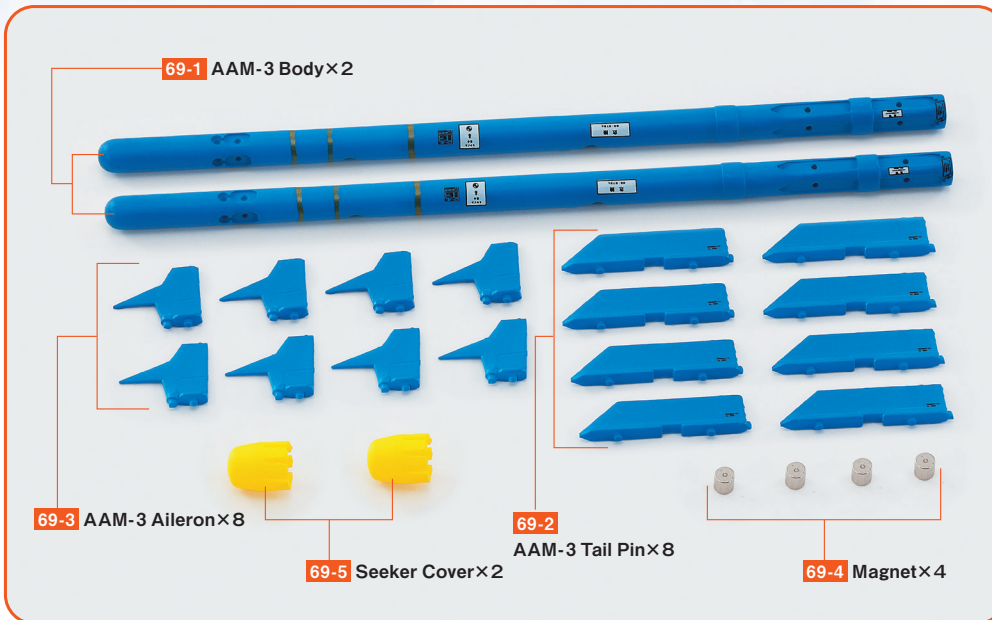


Issue 69

Assemble the AAM-3 ②

This issue will assemble two mock AAM-3 air-to-air missiles. Attach them to the wingtips of the completed F-2 for display.

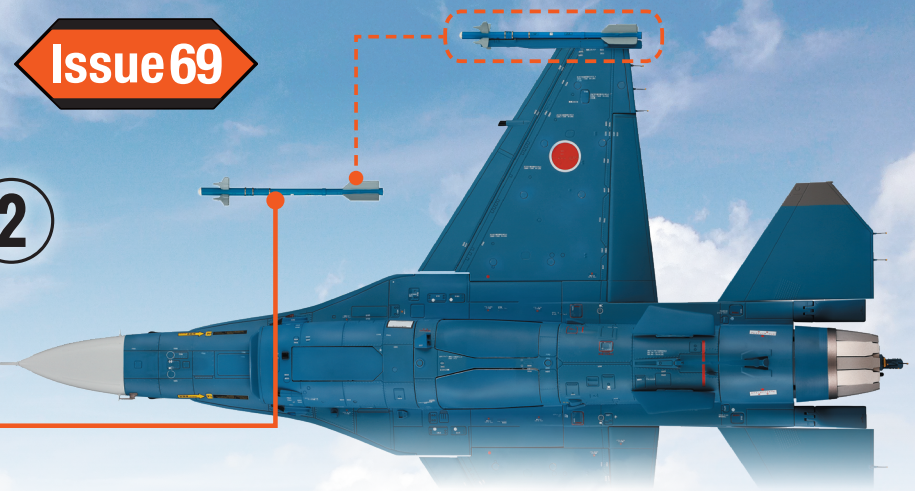

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

☐ **ABS Cement**
For joining ABS parts.

☐ **Universal Adhesive**
For joining metal parts.

Check!

Be sure to check the assembly video for detailed demonstrations.



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.





Key points for using tools and techniques.

1 Assemble the AAM-3

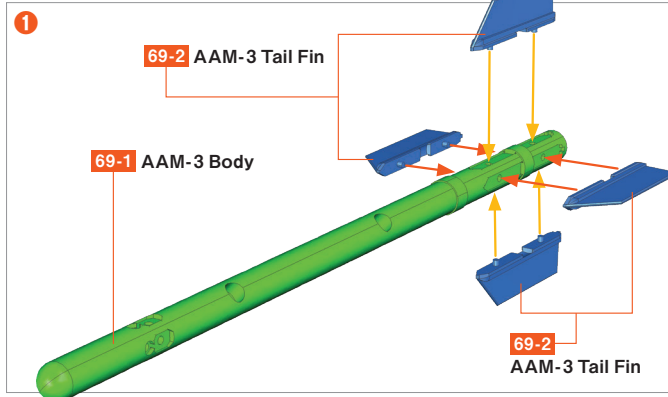


Insert four pieces of **69-2 AAM-3 Tail Fins** into the **69-1 AAM-3 Body** as shown. Create two sets of the same.

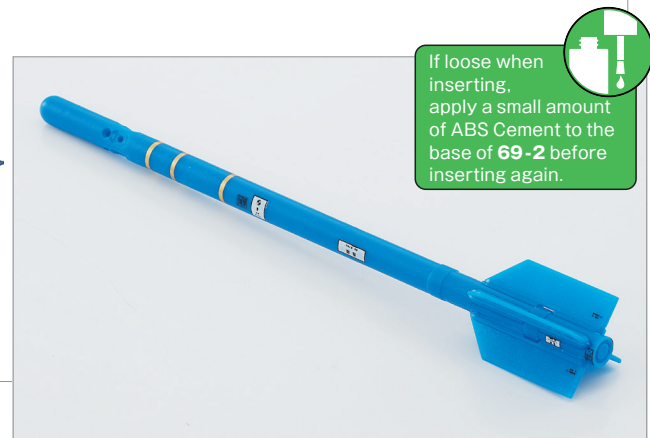


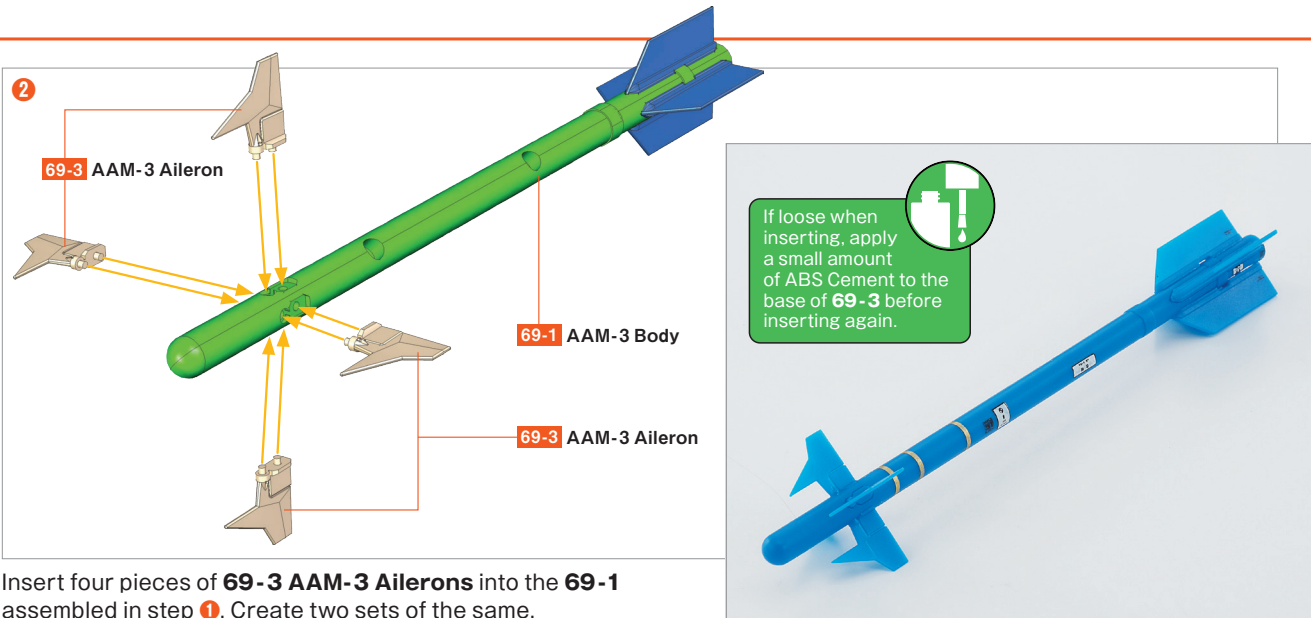

Insert four pieces of **69-3 AAM-3 Ailerons** into the **69-1** assembled in step **1**. Create two sets of the same.

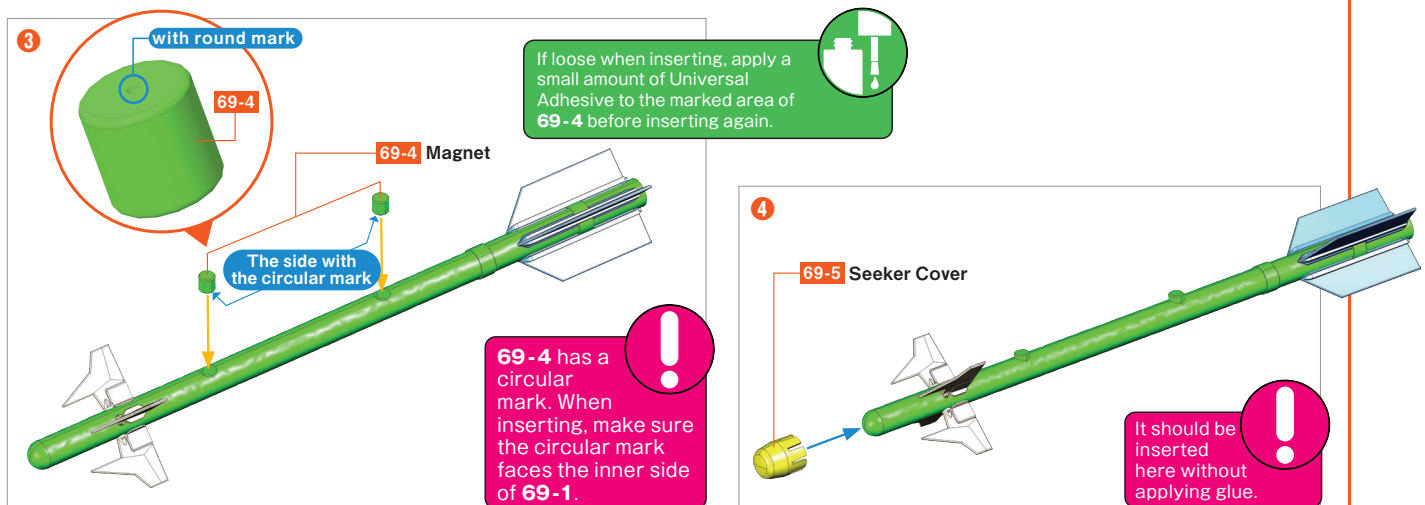

Insert two **69-4 Magnets** into the **69-1** assembled in step **2**.

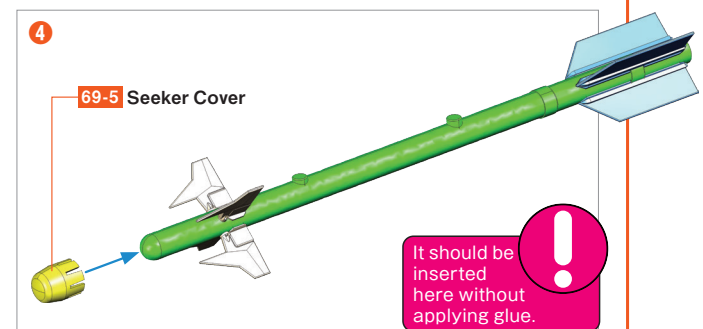

Insert the **69-5 Seeker Cover** into the tip of the AAM-3 assembled in step **3**.

Complete!

The assembly for this issue is now complete.

