



Assemble the canopy



In this issue, you will attach the movable parts to the canopy that came with previous issues to complete the canopy.

Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

☐ **Screwdriver**
Included in Issue 1.

☐ **ABS Cement**
For joining ABS plastic parts.

☐ **Universal Adhesive**
For joining metal parts.

Demonstration videos



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions




Key points for using tools and techniques.


1 Assemble the canopy

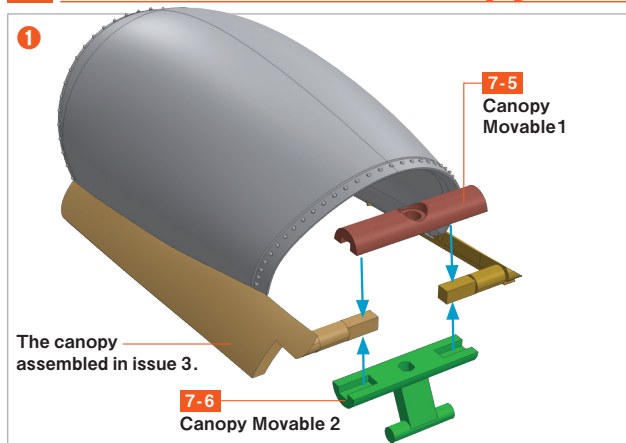

Set 7-5 Canopy Movable 1 and 7-6 Canopy Movable 2 to the canopy assembled in Issue 3 as shown.

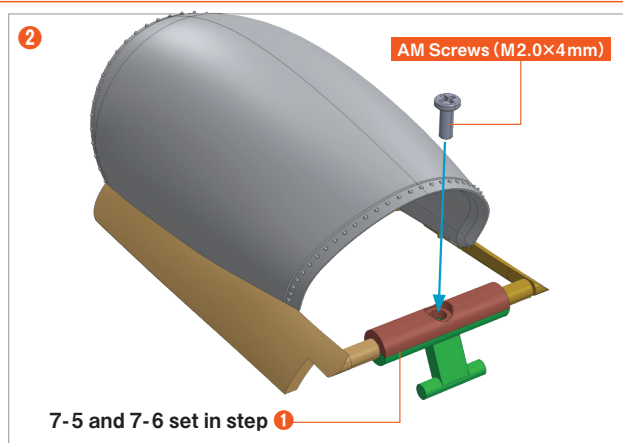


While holding 7-5 and 7-6 set in step 1, fix with AM Screws (M2.0 x 4 mm) from the 7-5 side.

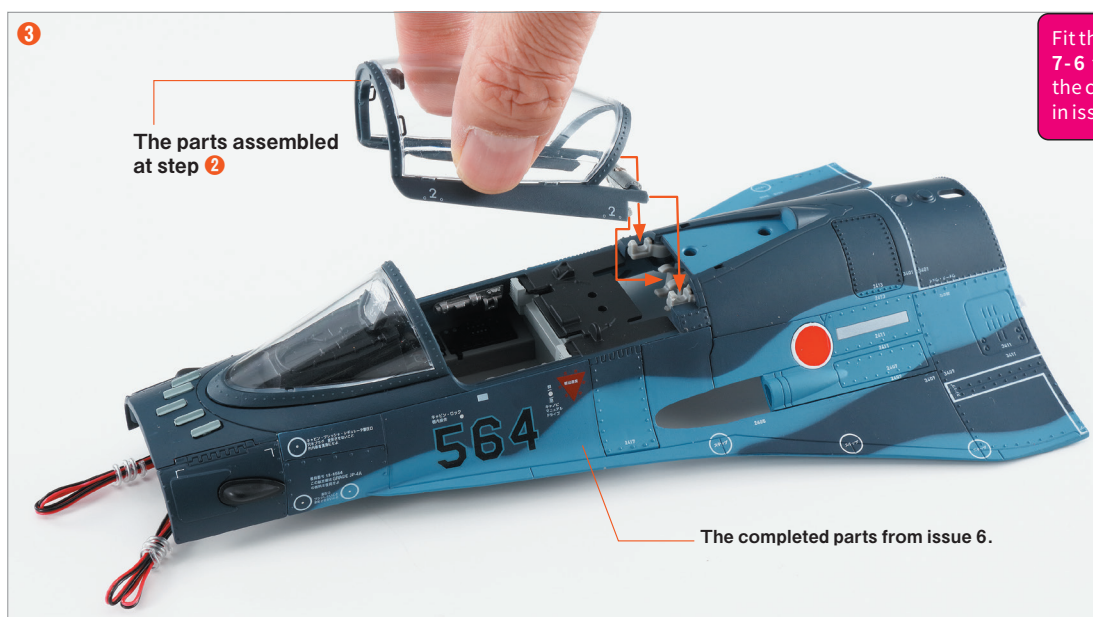


Fit the canopy part 7-6 to align with the canopy gear assembled in issue 6.

Fit the canopy assembled in 2 into the completed parts from issue 6.

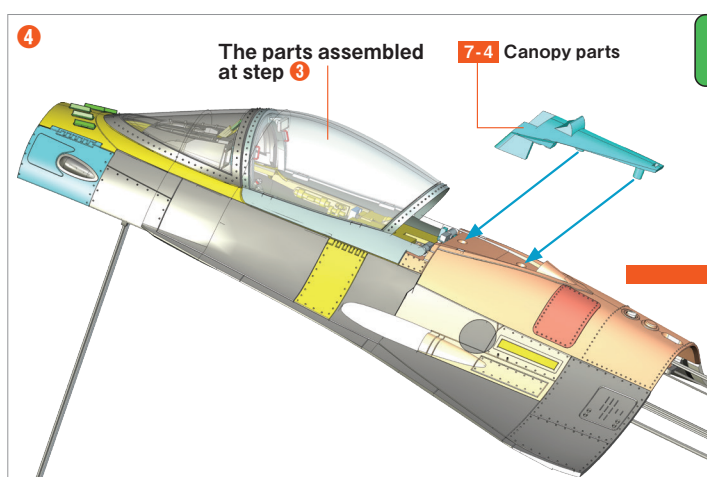

Insert the 7-4 Canopy Parts into the rear of the canopy assembled at step 3 as shown.

If the fit is loose, apply a small amount of Universal Adhesive to the base of 7-4 and then insert it.

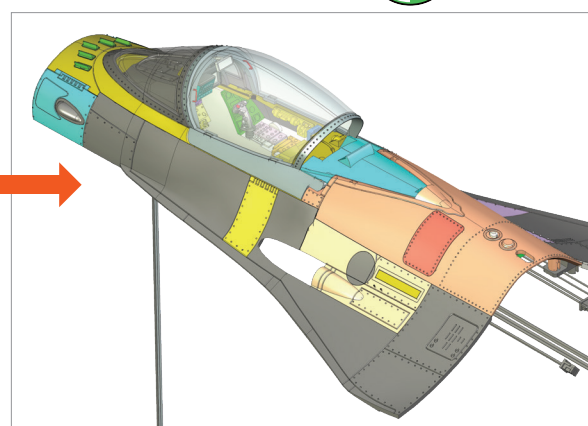





5

7-3
Cockpit parts

The parts attached
in step 3


If the fit is loose, apply
a small amount of
Universal Adhesive to the
base of 7-3 before fitting it.

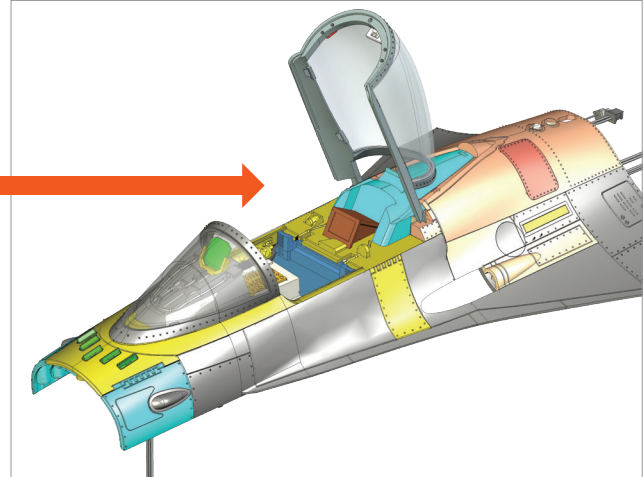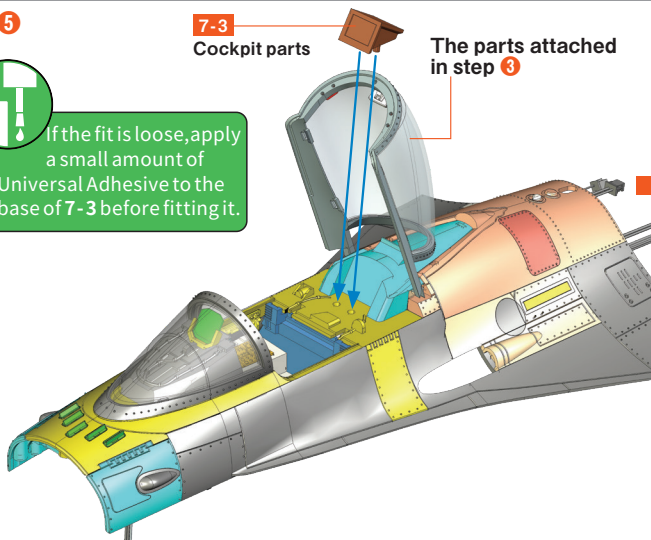

Open the canopy attached in step 3 and insert 7-3 cockpit parts as shown.

6

The pilot seat assembled in issue 2.

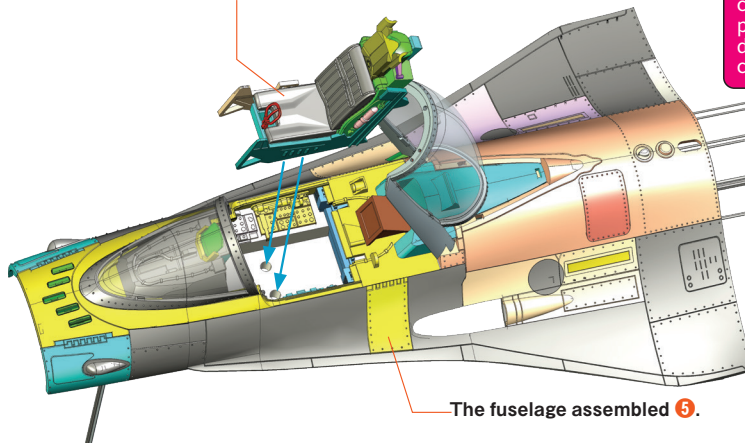

The fuselage assembled 5.


Insert the pilot seat assembled in issue 2 to the fuselage assembled in 5 as shown.

Do not glue the pilot seat so that we
can adjust it later. Adjust the
position of the pilot seat so that it
does not touch the upper part when
closing the canopy.



7

7-2 Canopy window

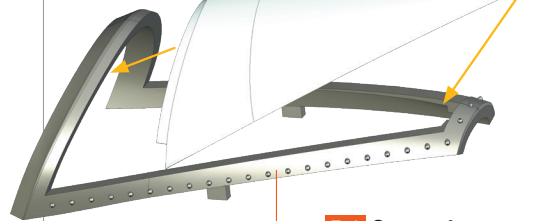


7-1 Canopy frame

Insert the 7-2 Canopy Window to the 7-1 Canopy Frame as shown.

8

If the fit is loose, apply a small amount of Universal
Adhesive to the base of 7-1 before fitting it. Ensure that
7-1 is securely placed in the position where it firmly
contacts the central canopy.

The canopy installed in 7.

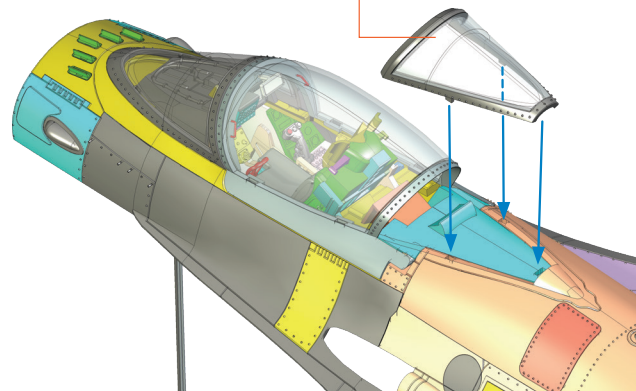

Insert the canopy assembled at step 7 to the rear section of the fuselage assembled at step 6 as shown.

Complete!

The assembly for this issue is
now complete.

