

Assemble the Mk.82 bomb ②


Issue 86




In this issue we will assemble the Mk.82 bomb (dummy round). The process is simple with only a few steps.



86-1 Mk.82 Body 1×12

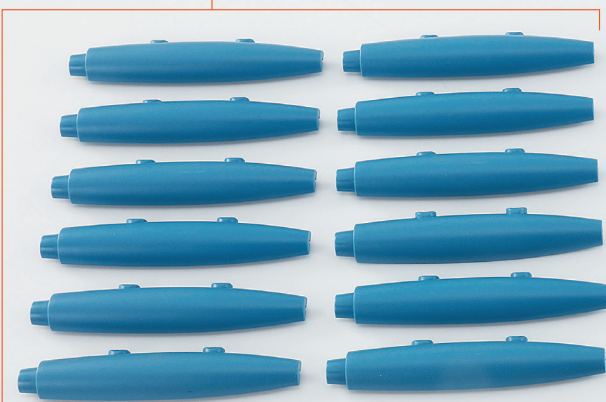

86-2 Mk.82 Body 2×12

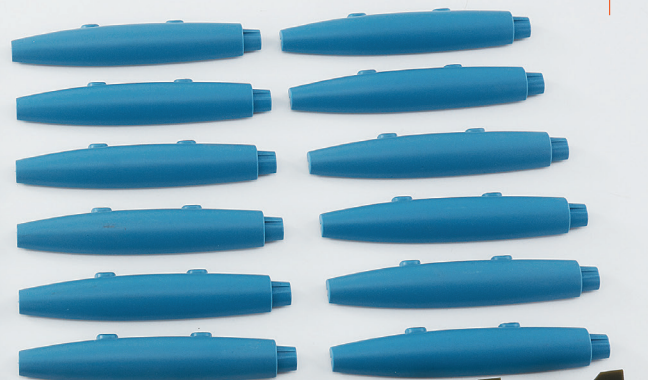

86-5 Magnet×24



86-4 Mk.82 Nose×12



86-3 Mk.82 Tail×12



Tools Needed

The following tools and materials are required to assemble this issue. Prepare them before starting work.

☐ **ABS Cement**
For joining ABS parts.

☐ **Universal Adhesive**
For joining metal parts.

Check!

Be sure to check the assembly video for detailed demonstrations.



Explanation of Symbols



Indicates where to attach included screws.



Indicates when to use adhesive. The correct adhesive will be indicated for each instance.




Cautions and Prohibitions.




Key points for using tools and techniques.



1 Assemble the Mk. 82 bomb

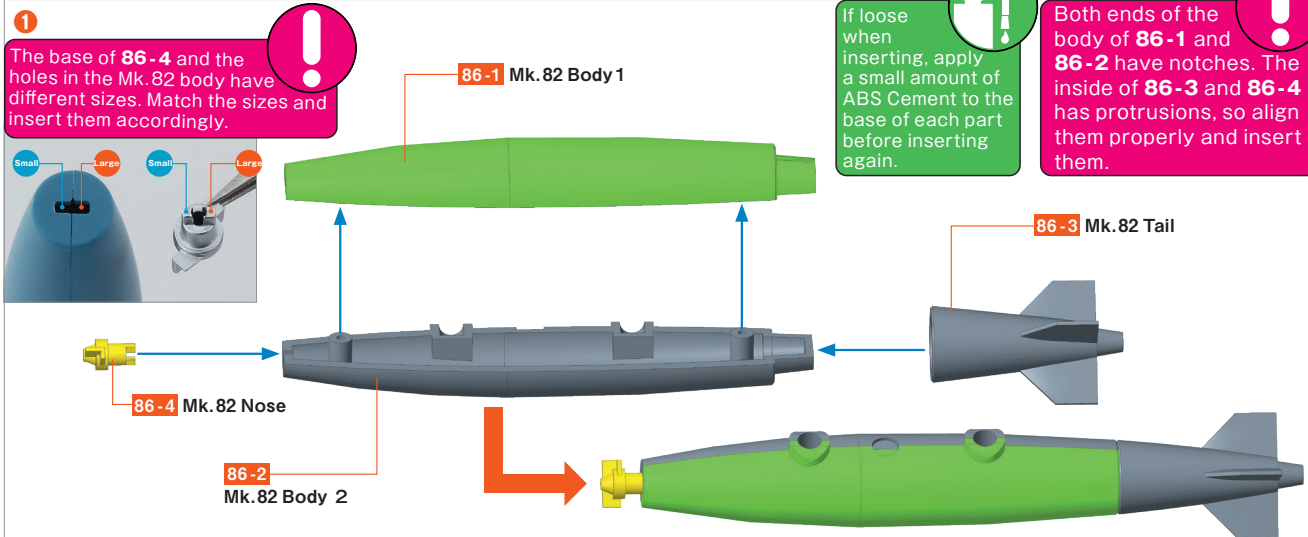

Fit together **84-1 Mk.82 Body 1** and **84-2 Mk.82 Body 2**, then insert **84-3 Mk.82 Tail** and **84-4 Mk.82 Nose** at both ends as shown. Repeat this process for a total of 12 units.

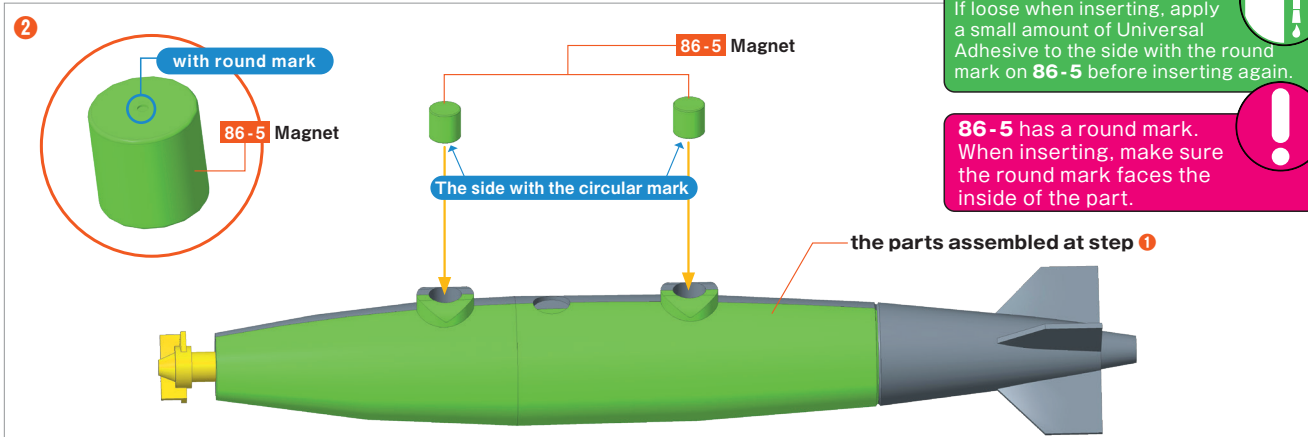

Insert **86-5 Magnet** into the **Mk.82 bomb** assembled in step 1 as shown. Repeat this process for a total of 12 units.

Complete!

