


Issue 20

In this issue, attach the Centre Cover to the Floor Pan assembled up to Issue 19, then install the two types of Floor Crossmember.



Attach the Centre Cover and Floor Crossmember to the Floor Pan

※ In this guide "Left" or "(L)", and "Right" or "(R)", refer to the direction as viewed from the driver's seat.

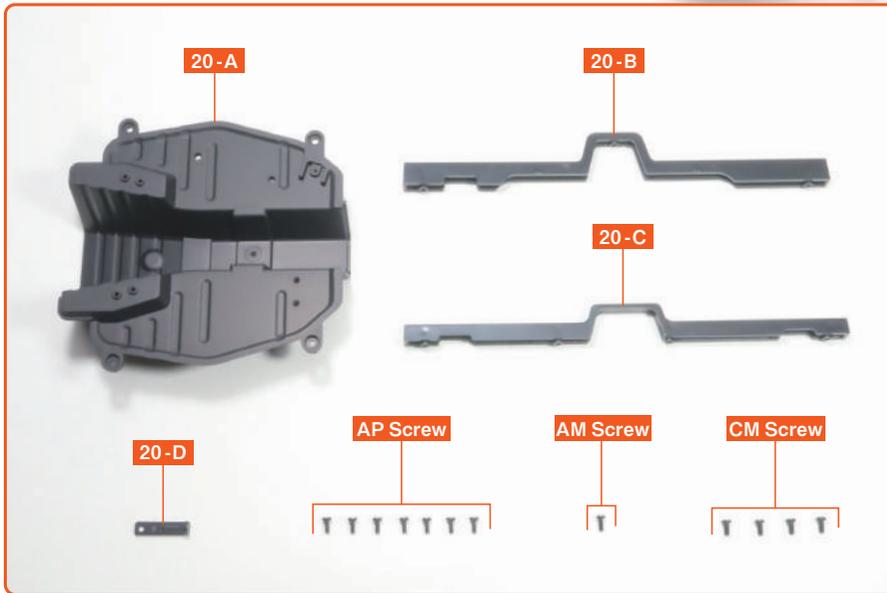

20-A Centre Cover

20-B Floor Crossmember (1)

20-C Floor Crossmember (2)

20-D Cord Clamp

AP Screw (1.7×4 mm) ×7+Spare

AM Screw (1.7×4 mm) ×1+Spare


CM Screw (2.0×4 mm) ×4+Spare

View the follow-along video




※ Due to the model's design, the shapes of some parts may differ from those of the real vehicle.

step 1 Floor Crossmember

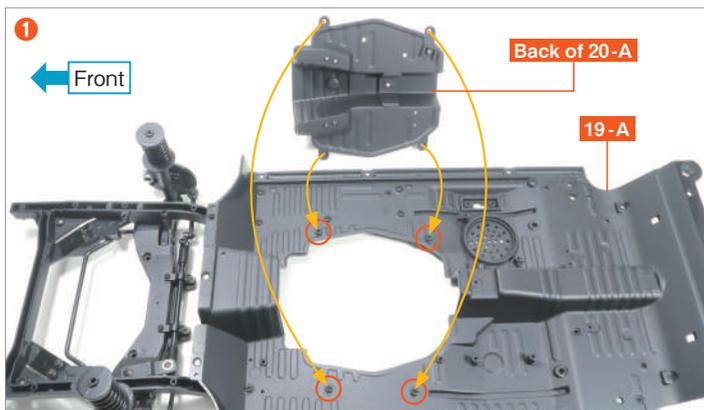

Prepare the Floor Pan assembled up to Issue 19. Align the recesses on the underside of **Centre Cover 20-A** with the four screw-hole protrusions on **Floor Pan 19-A**, then press it into place.

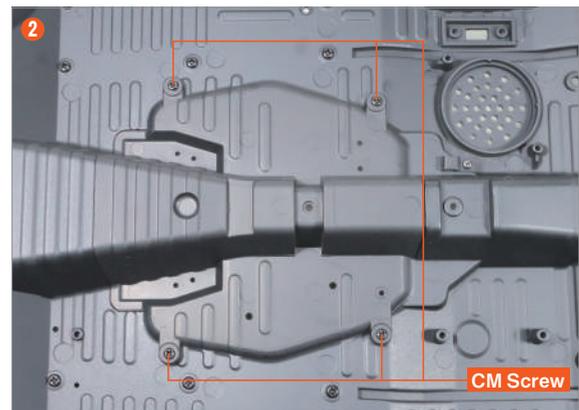




Secure the four points with **CM Screws**.

Step complete




step 2 Install the Floor Crossmembers



Before assembly, check the difference in shape between **Floor Crossmember (1) 20-B** and **Floor Crossmember (2) 20-C**.

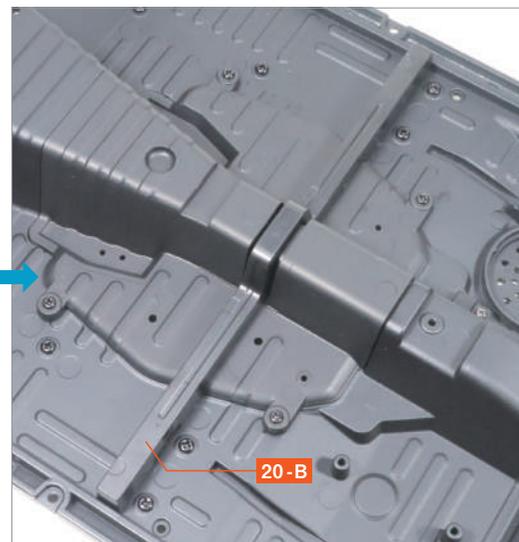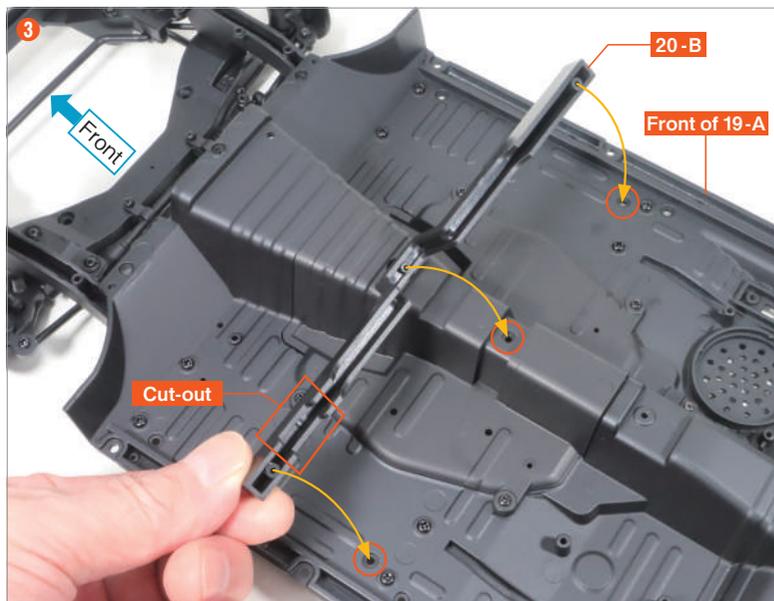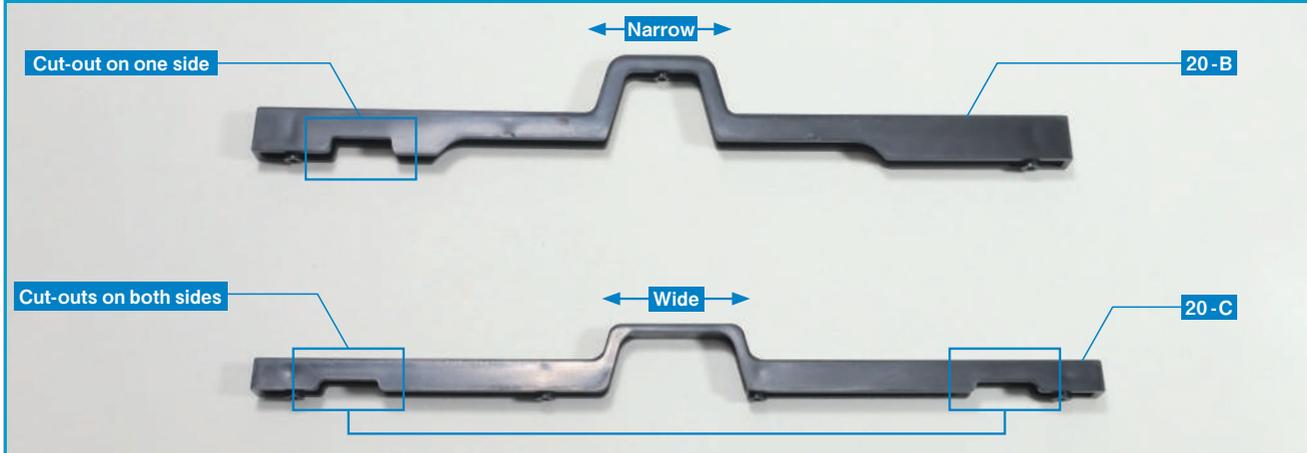


With the cut-out on **20-B** facing towards you, align the screw-hole protrusions on **20-B** with the recessed screw holes on **19-A**, then fit it into place.

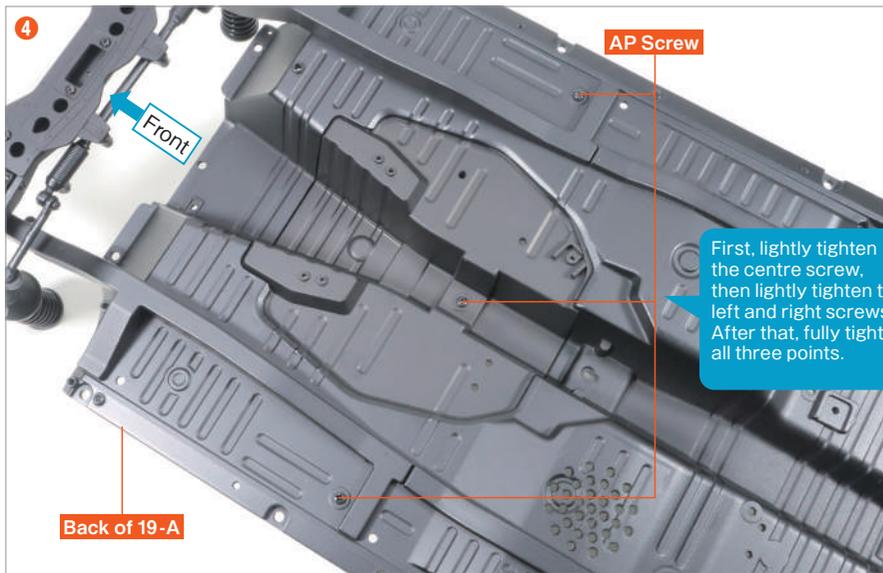


Hold **20-B** in place to prevent it from coming loose, turn it over, then secure it at three points with **AP Screws**.

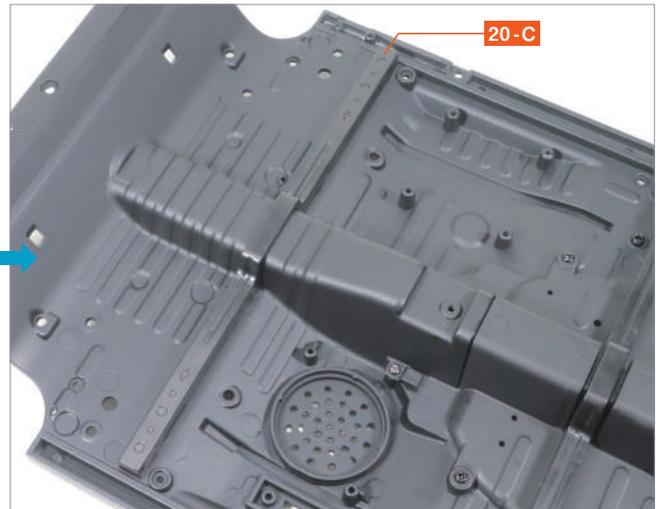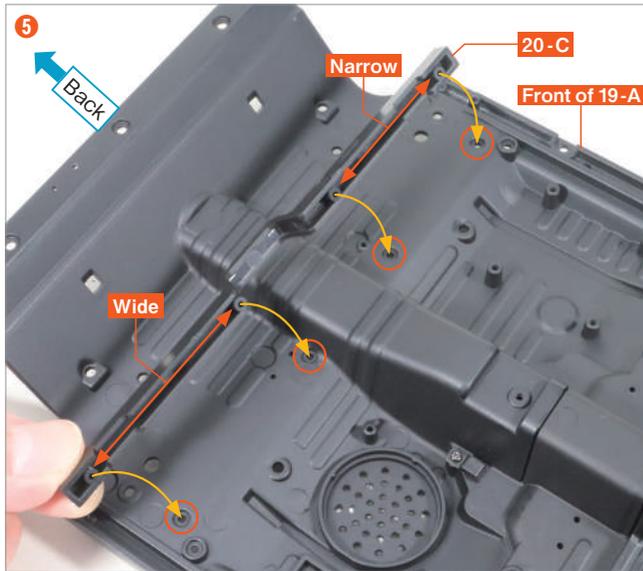


With the wider spacing between the screw-hole protrusions on **20-C** facing towards you, align the screw-hole protrusions on **20-C** with the recessed screw holes on **19-A**, then fit it into place.

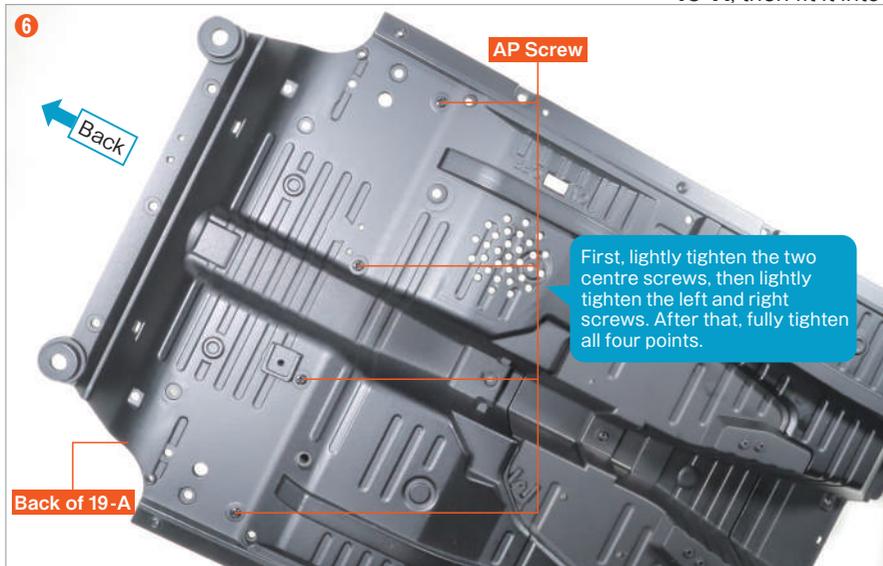

Hold **20-C** in place to prevent it from coming loose, turn it over, then secure all four points with **AP Screws**.

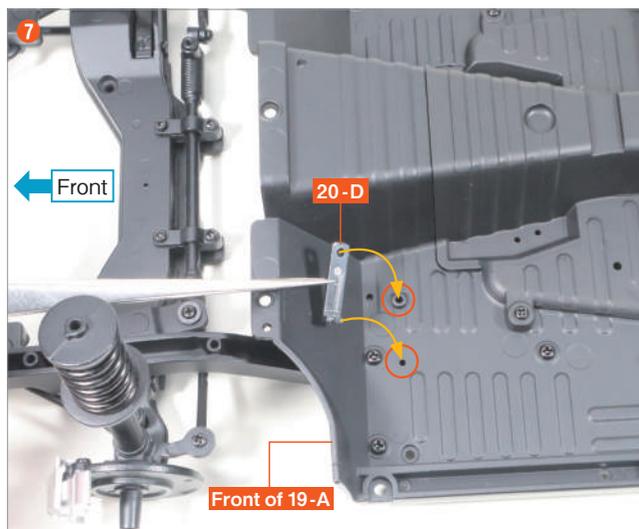

Insert the protrusion on **Cord Clamp 20-D** into the hole in **19-A**, aligning the screw holes on **20-D** and **19-A**.

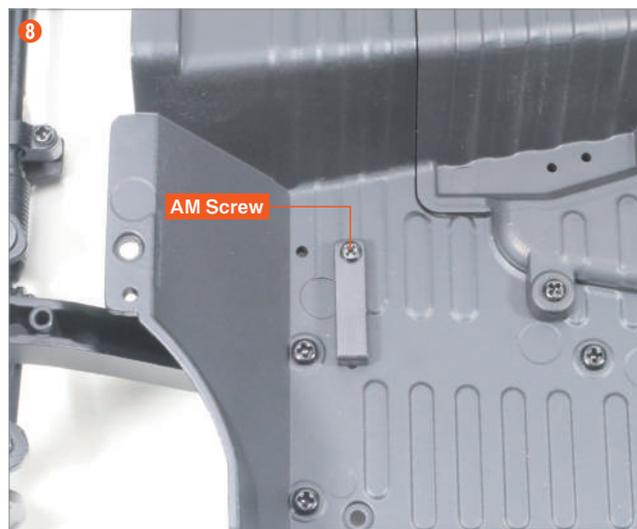

Secure it with **AM Screws**.

Complete

The assembly for Issue 20 is complete.
In Issue 21, the Rear Floor Panel will be installed on the rear of the Floor Pan.

