


Issue 21

In this issue, install the Rear Floor Panel and Rear Stabiliser Bar Bracket on the Floor Pan assembled up to Issue 20. In addition, attach the Cord Clamp to the upper side of the Floor Pan for wiring that will be used in a future mechanism.



Attach the Rear Floor Panel to the Floor Pan

※In this guide "Left" or "(L)", and "Right" or "(R)", refer to the direction as viewed from the driver's seat.

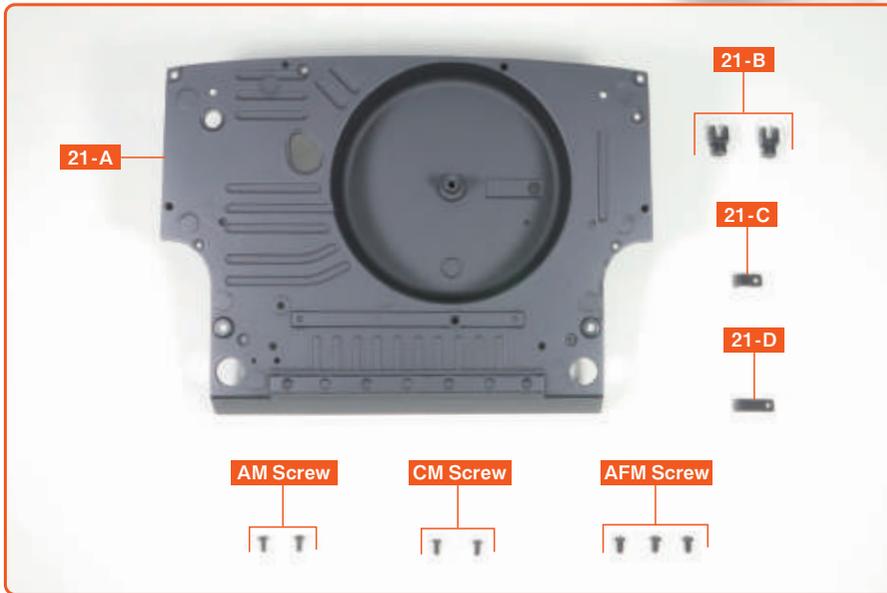

21-A Rear Floor Panel

21-B Rear Stabiliser Bar Bracket×2

21-C Cord Clamp (1)

21-D Cord Clamp (2)

AM Screw (1.7×4 mm) ×2+Spare

CM Screw (2.0×4 mm) ×2+Spare



AFM Screw (2.3×4 mm) ×3+Spare

View the follow-along video




※Due to the model's design, the shapes of some parts may differ from those of the real vehicle.

step 1 Install the Rear Floor Panel

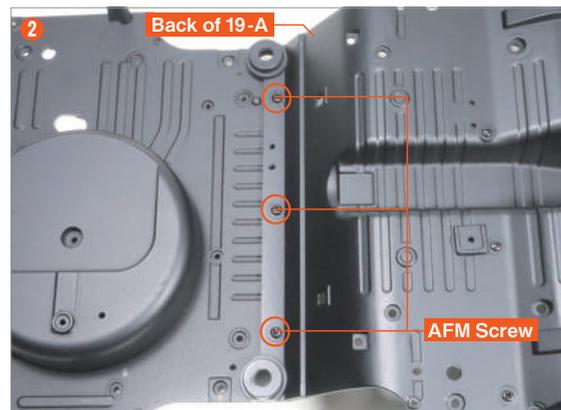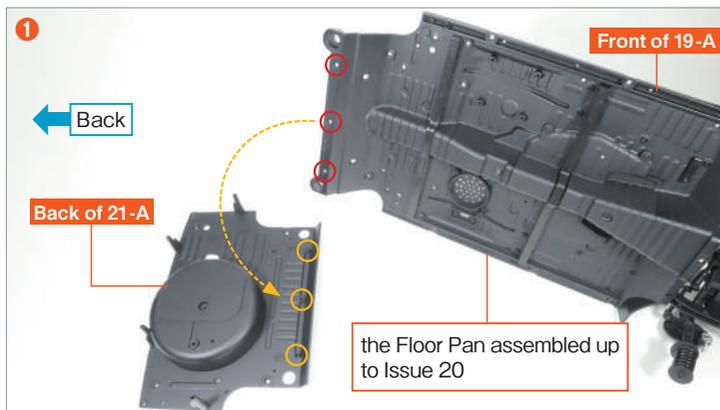

Prepare the Floor Pan assembled up to Issue 20. Align the red-circled recesses on **Floor Pan 19-A** with the yellow-circled screw-hole protrusions on **Rear Floor Panel 21-A**, then fit it into place.

Secure the three points with **AFM Screws**.

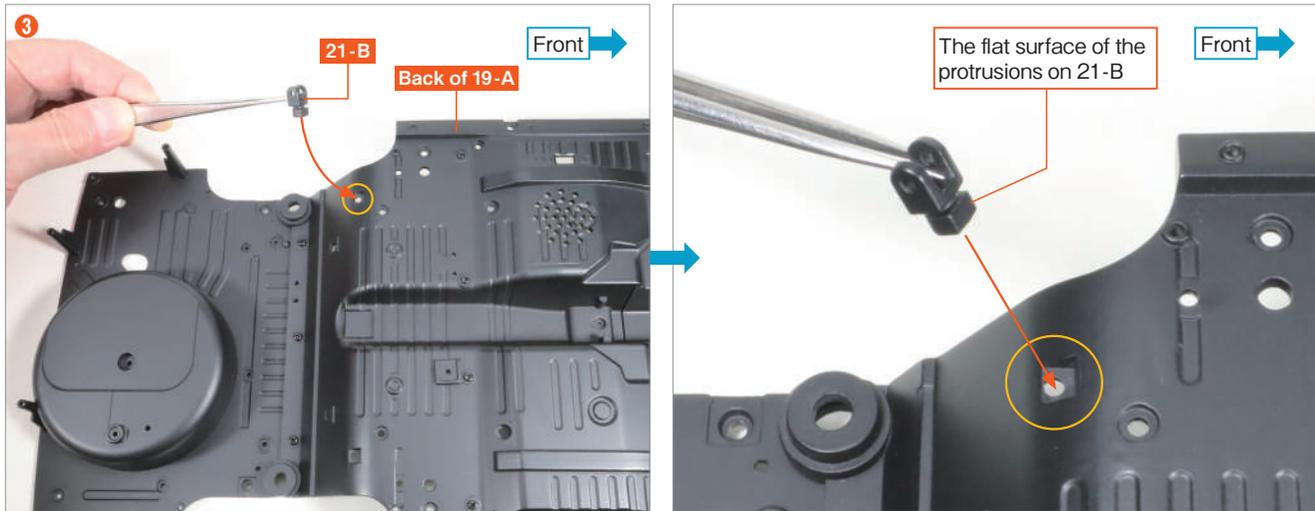



Align the lower protrusions of **Rear Stabiliser Bar Bracket 21-B** with the yellow-circled recesses on the underside of **19-A**. Ensure the flat surface of the **21-B** protrusions faces forward as you fit them into the recesses.




Hold **21-B** in place to prevent it from coming loose, turn the entire floor panel over, and secure it with **CM Screws**. If the screws are difficult to tighten, wear anti-slip gloves and hold **21-B** firmly while tightening.

The floor panel has been turned over. Make sure the screw holes on **21-B** are facing directly sideways.

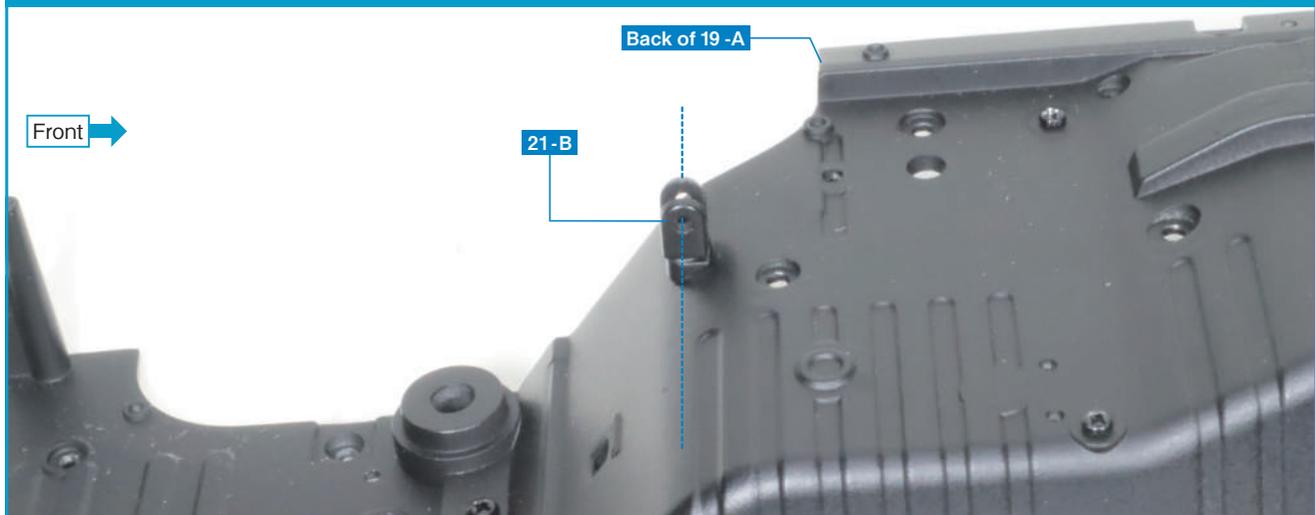

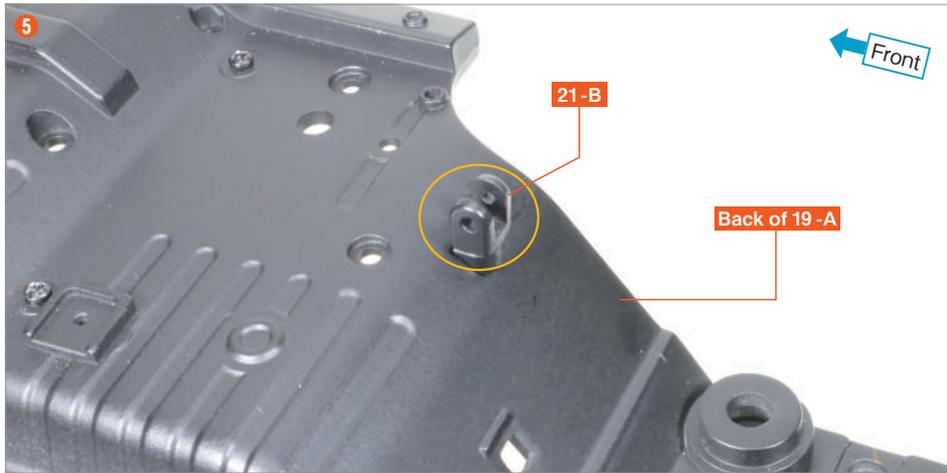

Turn the entire floor panel over again, then fit the other **21-B** in the same way, aligning it with the recesses on the underside of **19-A**.

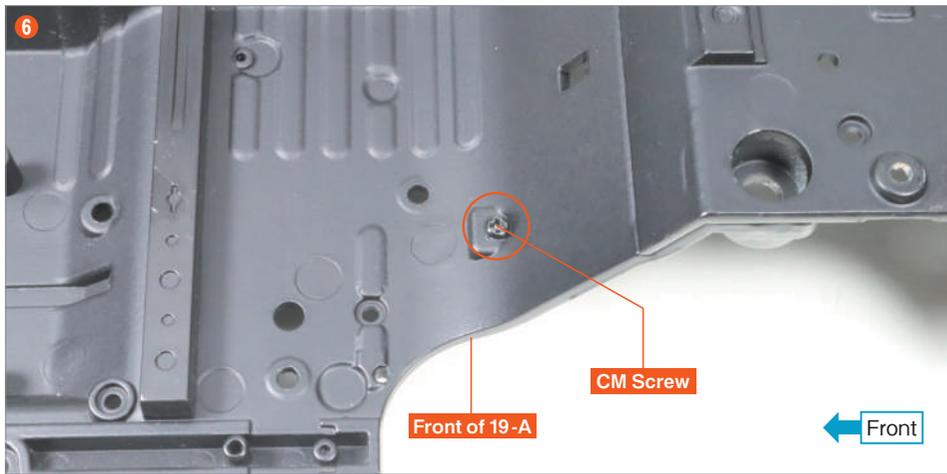


Hold **21-B** in place to prevent it from coming loose, turn the entire floor panel over, and fasten it with **CM Screws**.


Step complete



step 2 Attach the Cord Clamp

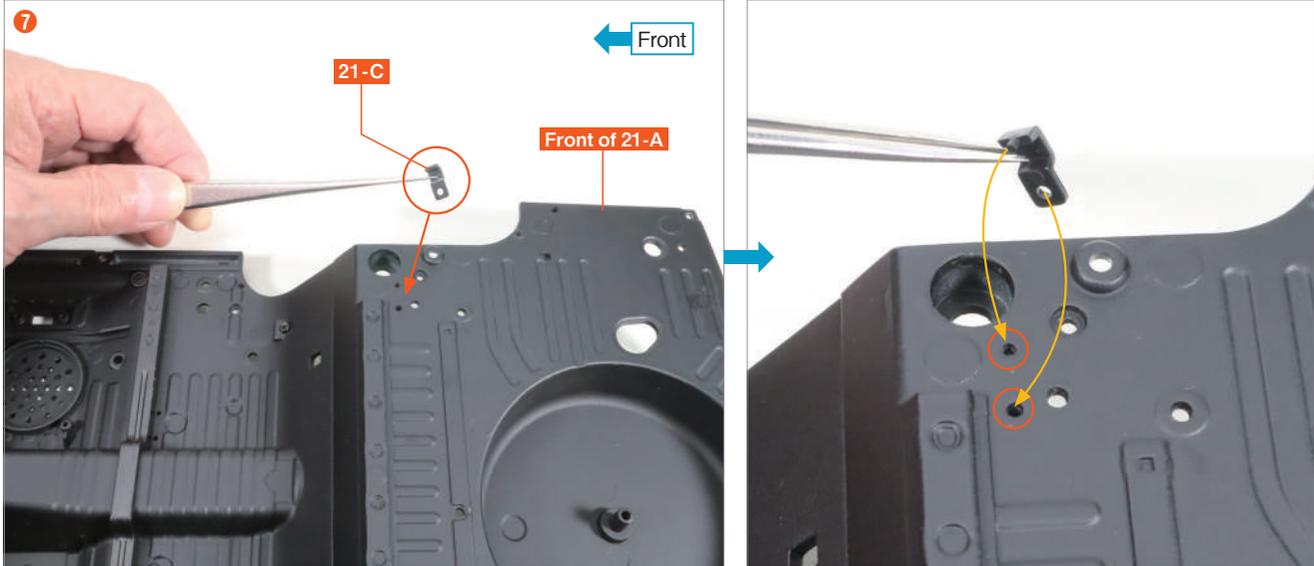

Align the protrusions and screw holes on **Cord Clamp (1) 21-C** with the recesses and screw holes on **21-A**, then press it into place.

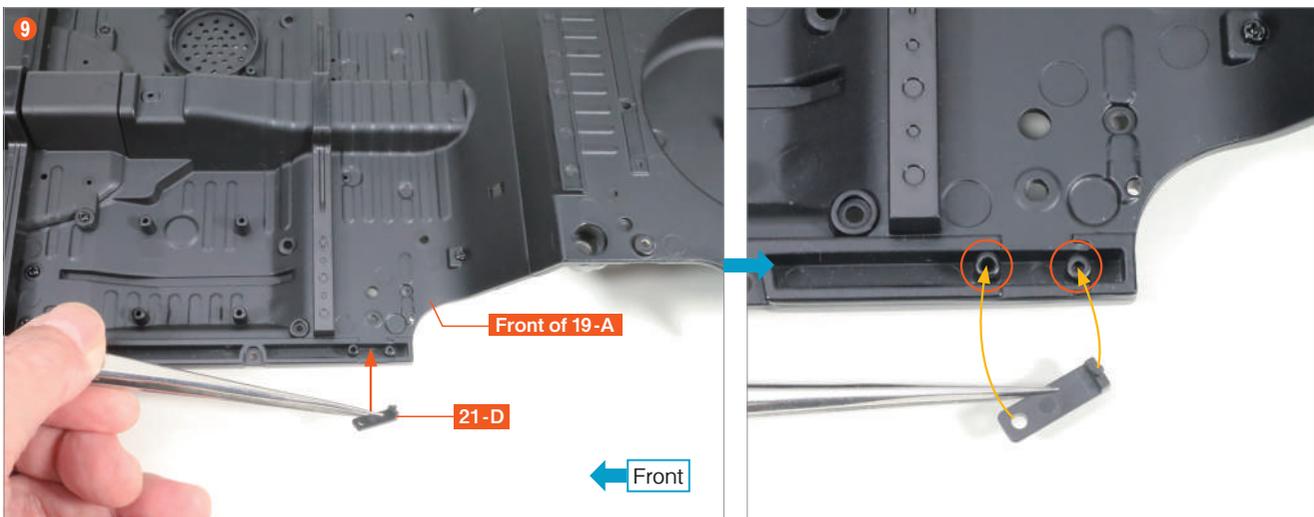

Align the protrusions and screw holes on **Cord Clamp (2) 21-D** with the recesses and screw holes on **19-A**, then fit it into place.



Secure it with **AM Screws**.

Step complete



Complete

The assembly for Issue 21 is complete. With the Rear Floor Panel in place, you can really appreciate the overall size of the chassis. Thinking about the body being mounted on top makes the next steps all the more exciting. In Issue 22, the Rear Subframe will be installed on the Rear Floor Panel.

